


**DISASSEMBLY****HINT:**

Tape the screwdriver tip before using it to pry parts.

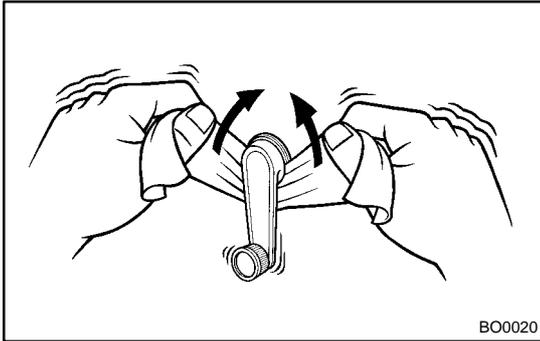

**1. w/o Power window:  
REMOVE REGULATOR HANDLE**



Pull off the snap ring with a cloth and remove the regulator handle and plate.

**HINT:**

At the time of reassembly, install the plate and regulator handle with the snap ring when the window glass is fully closed.


**2. REMOVE DOOR INSIDE HANDLE**

- (a) Remove the screw, and slide the door inside handle forward.
- (b) Disconnect the control link and remove the handle.

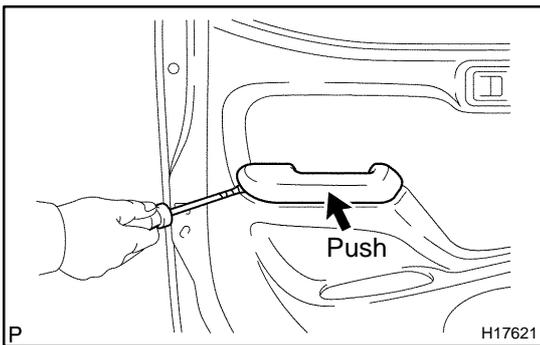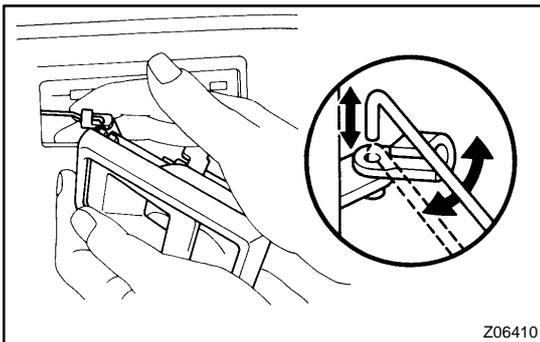


**3. REMOVE ARMREST**

Using a screwdriver, pry and remove the armrest during pushing the armrest outer vehicle.

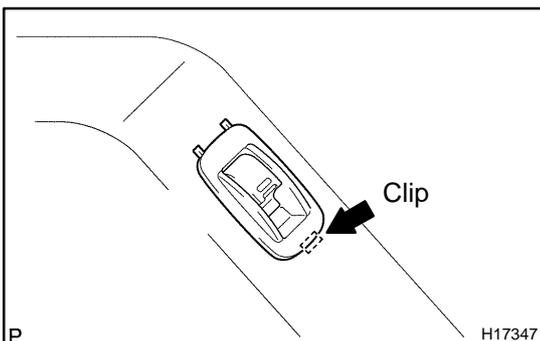

**4. w/ Power window:  
REMOVE POWER WINDOW SWITCH**


Using a screwdriver, remove the power window switch by pulling upward and disconnect the connector.

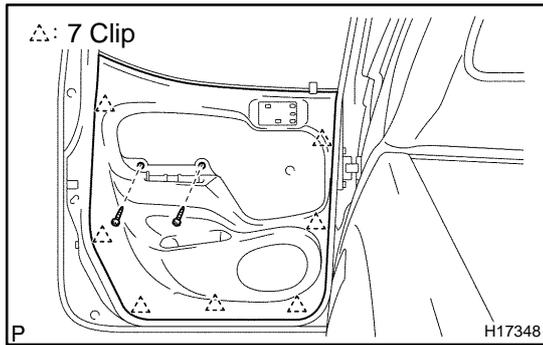**5. REMOVE DOOR TRIM**


- (a) Remove the 2 screws.
- (b) Using a screwdriver, remove the door trim upward.

**6. REMOVE SPEAKER**


Disconnect the connector and remove the 3 screws and speaker.

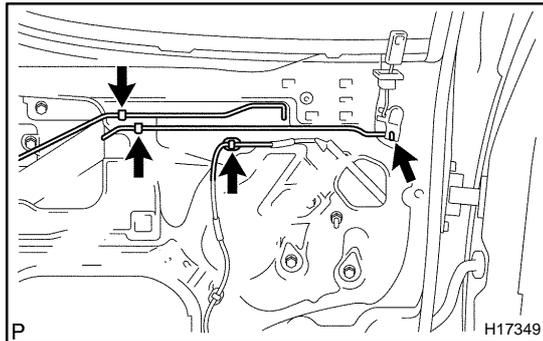**7. REMOVE SERVICE HOLE COVER**

- (a) Disconnect the 2 control links from the door and door lock knob.
- (b) Disconnect the wire harness by removing the clip.
- (c) Remove the service hole cover.

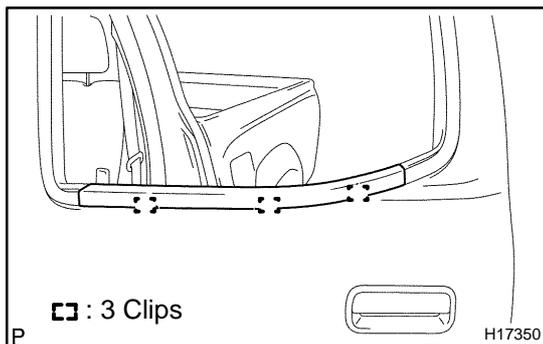**8. REMOVE WINDOW GLASS**


- (a) Using a screwdriver, remove the outer weatherstrip.
- (b) Remove the glass run.

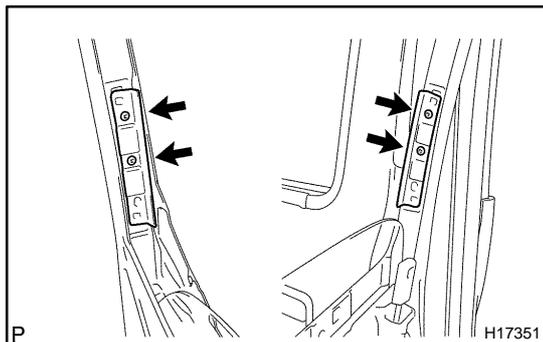

- (c) Remove the 4 screws and 2 brackets.
- (d) Open the window glass until seeing the 2 bolts of window glass.
- (e) Remove the 2 bolts and window glass.

**9. REMOVE WINDOW REGULATOR**

- (a) w/ Power window:  
Remove the 4 bolts and window regulator.
- (b) w/o Power window:  
Remove the 3 bolts and window regulator.

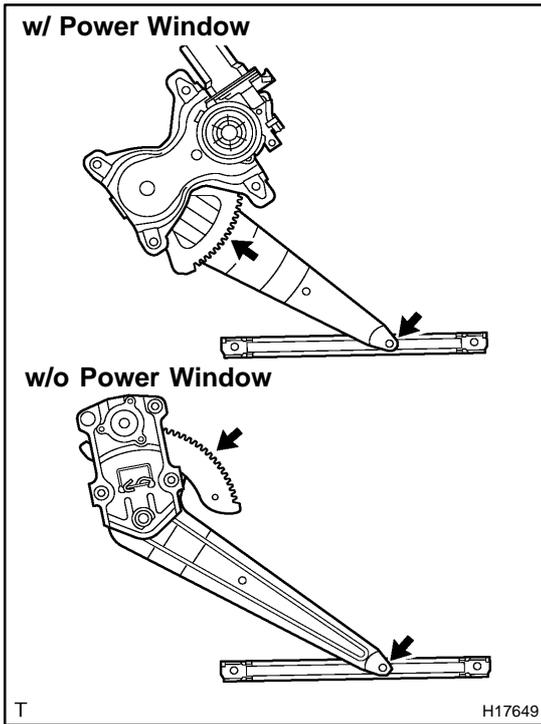


**HINT:**

At the time of reassembly, apply MP grease to the window regulator rollers as shown in the illustration.

**10. REMOVE FRONT LOWER FRAME**

- (a) Remove the cap near the door hinge.
- (b) Remove the bolt, nut and front lower frame.
- (c) Remove the lower glass run.

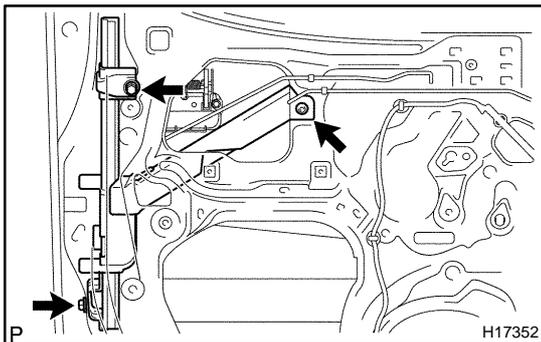


**11. REMOVE REAR LOWER FRAME**

- (a) Remove the protector.
- (b) Remove the bolt, nut and rear lower frame.
- (c) Remove the lower glass run.

**12. REMOVE DOOR LOCK KNOB**

Remove the door lock knob link and door lock knob.

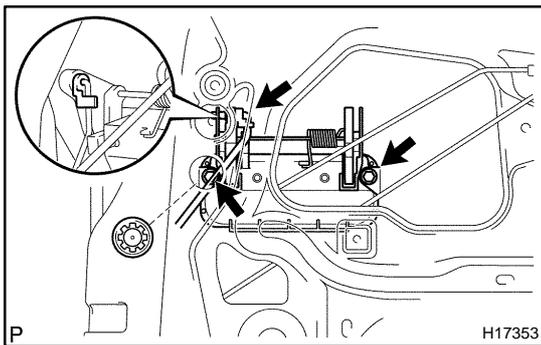

**13. REMOVE OUTER DOOR HANDLE**

- (a) Disconnect the control link of the door lock.
- (b) Remove the cap near the door lock.
- (c) Remove the 2 bolts and outer door handle.

**14. REMOVE DOOR LOCK**

- (a) w/ Power door lock:  
Disconnect the connector.
- (b) Remove the 2 control links.
- (c) Using a torx socket wrench (T30), remove the 3 bolts and door lock.

**Torque: 5.0 N·m (50 kgf·cm, 43 in.-lbf)**

**HINT:**

At the time of reassembly, please refer to the following items.

- Apply adhesive to the 3 screws.  
**Part No. 08833-00070, THREE BOND 1324 or equivalent**
- Apply MP grease to the sliding and rotating parts of the door lock.

**15. DISCONNECT WIRE HARNESS**