

DISASSEMBLY

1. REMOVE REAR SEAT

Remove the 2 covers, 4 bolts and rear seat.

Torque: 37 N·m (380 kgf·cm, 27 ft·lbf)

2. REMOVE HEADREST

3. REMOVE INNER SEAT BELTS

Remove the 2 bolts and 2 seat inner belts.

Torque: 42 N·m (430 kgf·cm, 31 ft·lbf)

4. SEPARATE SEATBACKS AND SEAT CUSHION

(a) Remove the cover, 3 bolts, plate and RH side seat hinge upper plate.

Torque: 21 N·m (215 kgf·cm, 15 ft·lbf)

(b) Remove the cover, 3 bolts, plate and LH side seat hinge upper plate.

Torque: 21 N·m (215 kgf·cm, 15 ft·lbf)

(c) Remove the bolt and plate, separate the 2 seatbacks and seat cushion.

Torque: 21 N·m (215 kgf·cm, 15 ft·lbf)

5. DISASSEMBLE SEAT CUSHION

(a) Remove the cover and plate from the seat cushion.

(b) Remove the hog rings and seat cushion frame from the seat cushion cover with the pad.

(c) Remove the hog rings and seat cushion cover from the seat cushion pad.

6. DISASSEMBLE RH SEATBACK

(a) Remove the 5 screws, 2 seat support cushions and seatback board.

(b) Remove the hog rings and 2 headrest supports and seatback frame from the seatback cover with the pad.

(c) Remove the hog rings and seatback cover from the seatback pad.

7. DISASSEMBLE LH SEATBACK

(a) Remove the 3 screws, seat support cushion and seatback board.

(b) Remove the hog rings, 2 headrest supports and seatback frame from the seatback cover with the pad.

(c) Remove the 2 bolts and seatback stay bracket.

(d) Remove the hog rings and seatback cover from the seatback pad.

8. DISASSEMBLE SEATBACK LOCK

Remove the snap, rod, 2 bushes, spring and seatback lock from the seatback frame.