



REMOVAL


1. REMOVE SUNSHADE TRIM
2. REMOVE LOCK HANDLE AND LOCK BASE
 - (a) Remove the 2 screws and lock garnish.
 - (b) Extra cab:
Remove the lock handle and holders with 2 bolts.
 - (c) Double cab
Remove the lock handle and holders with 2 nuts.
Torque: 3.0 N·m (30 kgf·cm, 26 in.-lbf)
 - (d) Remove the lock base and spacer with 2 screws.
Torque: 6.0 N·m (60 kgf·cm, 52 in.-lbf)

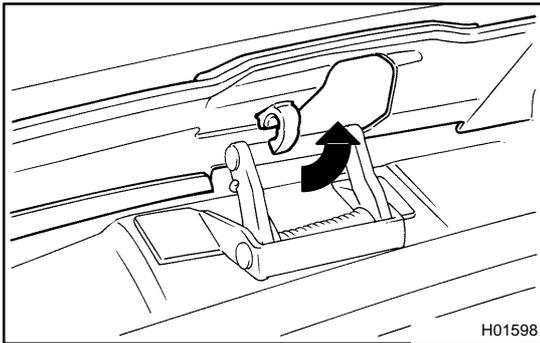


3. REMOVE WIND DEFLECTOR PANEL
 - (a) Remove the clip as shown in the illustration.

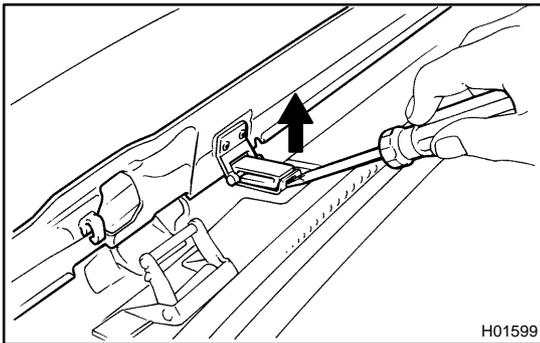

- (b) Using a screwdriver, remove the wind deflector panel as shown in the illustration.
- (c) Employ the same manner described above to the other side.

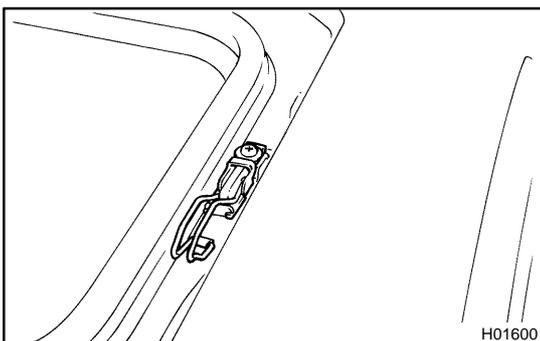

4. REMOVE REMOVABLE ROOF AUXILIARY CATCH
Remove the screw and auxiliary catch.
5. REMOVE ROOF HEAD LINING (See page [BO-63](#), [BO-68](#))

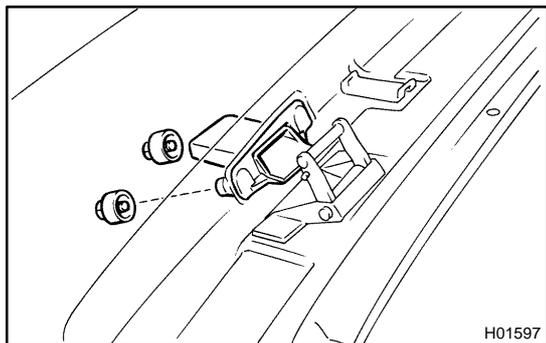**6. REMOVE REMOVABLE ROOF HINGE CASE**

- (a) Remove the 2 bolts and hinge case.
Torque: 3.5 N·m (35 kgf·cm, 30 in.-lbf)
- (b) Employ the same manner described above to the other side.