


REMOVAL


HINT:

Tape the screwdriver tip before using to pry parts.

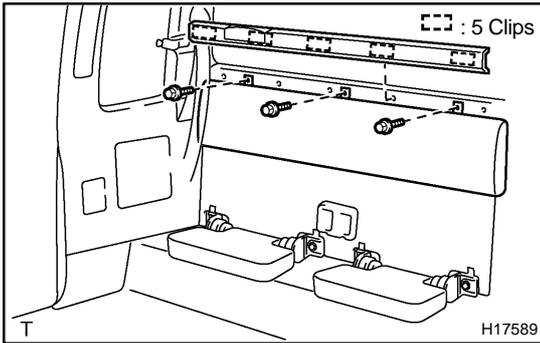

1. REMOVE BACK PANEL UPPER GARNISH AND REAR SEAT BACK

- (a) Using a screwdriver, remove the garnish.
- (b) Remove the 3 bolts and rear seat back.
Torque: 18 N·m (185 kgf-cm, 13 ft-lbf)

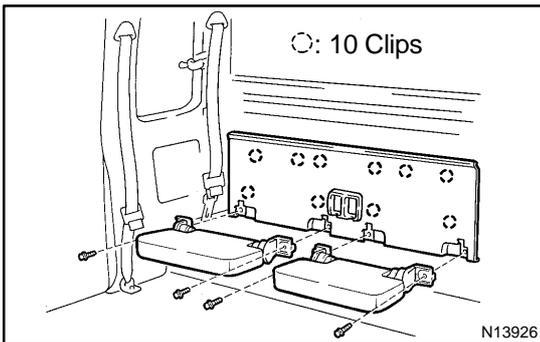

2. REMOVE BACK PANEL LOWER GARNISH

Using a screwdriver, remove the garnish.


3. REMOVE REAR SEAT CUSHIONS

Remove the 4 bolts and rear seat cushions.


Torque: 18 N·m (185 kgf-cm, 13 ft-lbf)

4. REMOVE QUARTER TRIMS


- (a) Remove the 4 screws and scuff plate.
- (b) Remove the door opening trim around the quarter trim.
- (c) Remove the 2 cover and 2 bolts, disconnect the front seat outer belt.
- (d) Using a screwdriver, open the seat belt anchor cover.
- (e) Remove the 2 bolts and disconnect the rear seat outer belt.
- (f) Remove the screw and coat hook.

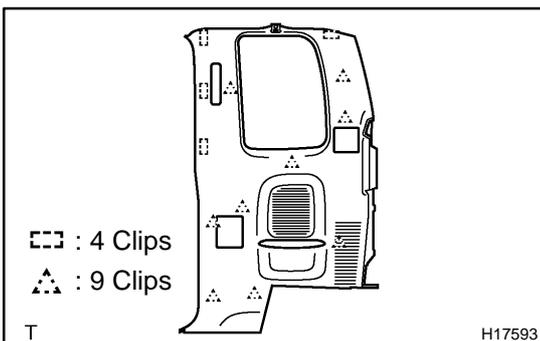


- (g) Using a screwdriver, pry and remove the quarter trim.

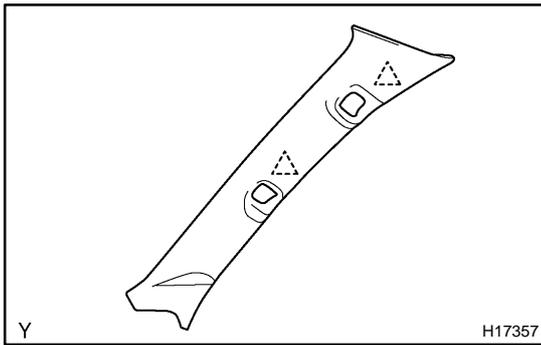**5. REMOVE FRONT PILLAR GARNISHES**


- (a) RH:
Remove the 2 plugs, 2 bolts and assist grip.
- (b) Remove the door opening trim around the front pillar.
- (c) Using a screwdriver, remove the front pillar garnishes.

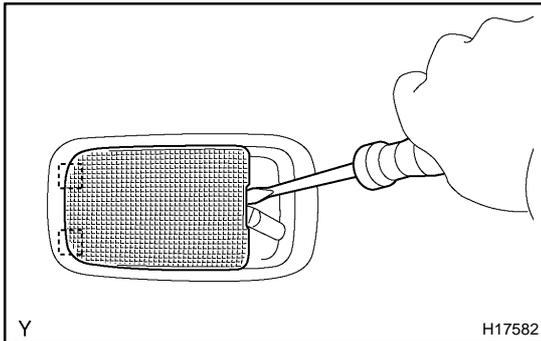**6. REMOVE ROOM LIGHT**


- (a) Using a screwdriver, remove the room light cover.

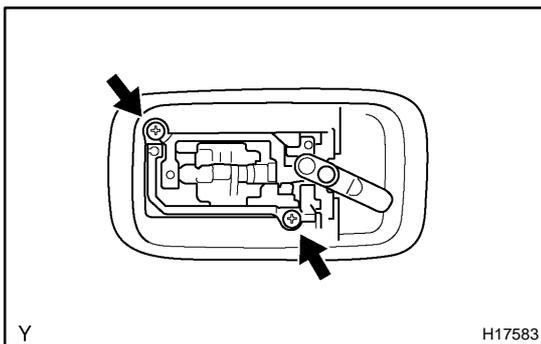

- (b) Remove the 2 screws and room light, then disconnect the connector.

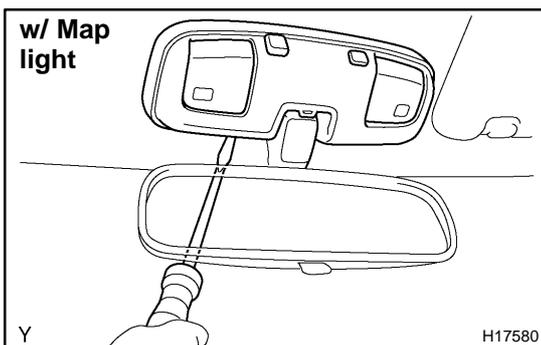**7. REMOVE INNER REAR VIEW MIRROR**

- (a) Using a screwdriver, remove the cover.
- (b) w/o map light:
Remove the 2 screws and mirror.

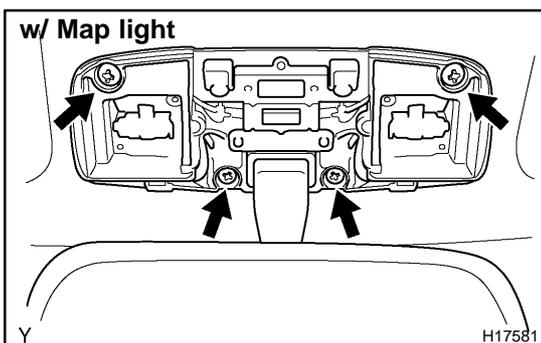

- (c) w/ map light:
Remove the 4 screws and mirror with map light, then disconnect the connector.

8. REMOVE SUN VISORS AND HOLDERS

- (a) Remove the 2 screws and sun visor.
- (b) Remove the screw and holder.

**9. w/ Removable roof:
REMOVE SUNSHADE TRIM**

10. w/ Removable roof:
REMOVE REMOVABLE ROOF LOCK HANDLE AND LOCK BASE
11. w/ Removable roof:
REMOVE SLIDING ROOF OPENING TRIM
12. **REMOVE ROOF HEADLINING**

Remove the 2 clips and roof headlining.