



REMOVAL

HINT:

Tape the screwdriver tip before using to pry parts

1. REMOVE QUARTER TRIMS

- (a) Remove the 4 screws and scuff plate.
- (b) Remove the door opening trim around the quarter trim.
- (c) Remove the 2 covers and 2 bolts, disconnect the front seat outer belt.
- (d) Remove the back panel upper garnish.
- (e) Using a screwdriver, pry and remove the quarter trim.
- (f) Remove the other side quarter trim.

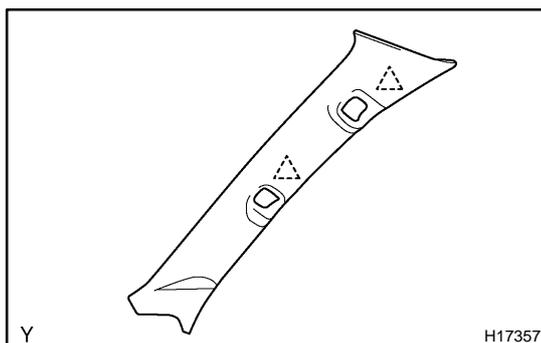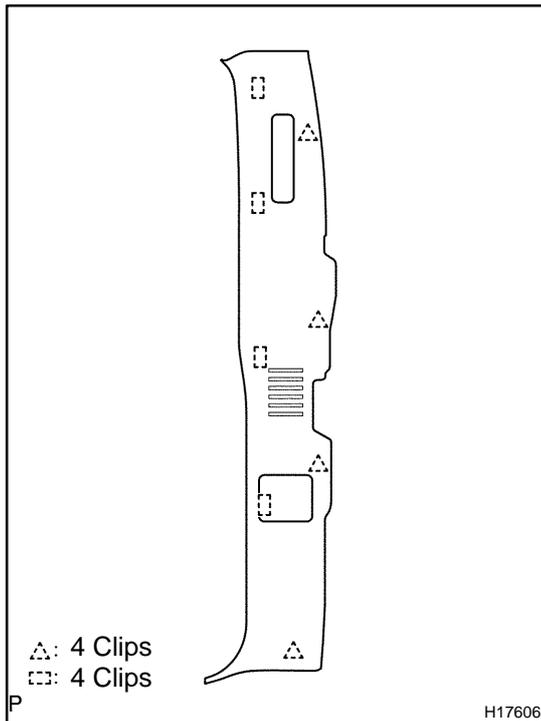

2. REMOVE FRONT PILLAR GARNISHES

- (a) RH:
Remove the 2 plugs, 2 bolts and assist grip.
- (b) Remove the door opening trim around the front pillar.
- (c) Using a screwdriver, remove the front pillar garnishes.

3. REMOVE INNER REAR VIEW MIRROR

- (a) Using a screwdriver, remove the cover.
- (b) Remove the 2 screws and mirror.

4. REMOVE SUN VISORS AND HOLDERS

- (a) Remove the 2 screws and sun visor.
- (b) Remove the screw and holder.

5. REMOVE ROOF HEADLINING

Remove the 2 clips and roof headlining.