

INSPECTION

CAUTION:

For removal and installation of the seat belt pretensioner, see page [BO-108](#) and [BO-115](#).

Be sure to follow the correct procedure.

1. PRETENSIONER IS NOT ACTIVATED

- (a) Perform a diagnostic system check (See page [DI-588](#)).
- (b) Perform a visual check which includes the following items with the front seat outer belt removed from the vehicle.
 - Regular cab, Extra cab:
Check for cuts and cracks in, or marked discoloration on the quarter trim.
 - Double cab:
Check for cuts and cracks in, or marked discoloration on the center pillar and quarter trim.
 - Check for cuts and cracks in wire harness, and for chipping in connectors.
 - Regular cab, Extra cab:
Check for deformation of the quarter panel.
 - Double cab:
Check for deformation of the center pillar.
 - Check for cuts miute cracks in wire harness or marked discoloration on the front seat outer belt.

2. PRETENSIONER IS ACTIVATED

- (a) Perform a diagnostic system check (See page [DI-588](#)).
- (b) Perform a visual check which includes the following items with the front seat outer belt removed from the vehicle.
 - Regular cab, Extra cab:
Check for deformation of the quarter panel.
 - Double cab:
Check for deformation of the center pillar.
 - Check for damage on the connector and wire harness.

3. REPLACE SEAT BELT WITH PRETENTIONER

In the following cases, replace the seat belt with pretentioner.

- Seat belt pretensioner has been activated.
- Seat belt pretensioner has been found to be faulty in troubleshooting.
- Front seat outer belt has been found to be faulty in test on page [BO-106](#).
- Front seat outer belt has been dropped.