


REMOVAL

1. REMOVE SERVICE HOLE COVER

Remove the 12 screws and service hole cover.

2. DISCONNECT TAIL GATE LOCK LINK FROM TAIL GATE LOCK CONTROL

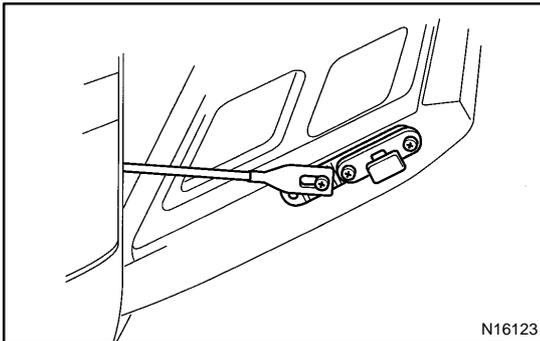

3. REMOVE TAIL GATE CABLE

- Disconnect the tail gate cable from the tail gate.
- Remove the bolt and tail gate cable from the body.
- Employ the same manner described above to the other side.

Torque: 14 N·m (140 kgf·cm, 10 ft·lbf)


4. REMOVE TAIL GATE LOCK FROM TAIL GATE

- Remove the 2 screws and tail gate lock.
- Employ the same manner described above to the other side.

5. REMOVE TAIL GATE LOCK STRIKERS

Remove the 4 screws and tail gate lock strikers.

Torque: 12 N·m (120 kgf·cm, 9 ft·lbf)

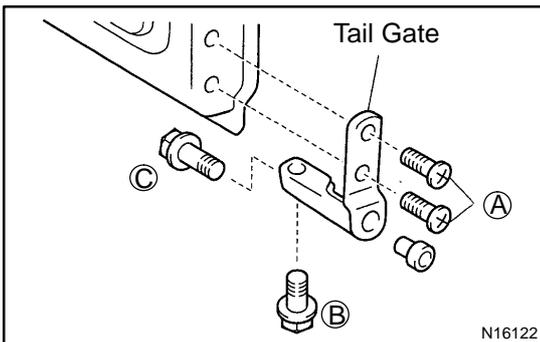

6. REMOVE TAIL GATE

Remove the 4 screws and tail gate.

Torque:

28 N·m (290 kgf·cm, 19 ft·lbf) for A


7. REMOVE TAIL GATE HINGES

Remove the 2 bolts and tail gate hinge.

Torque:

30 N·m (310 kgf·cm, 22 ft·lbf) for B

24 N·m (290 kgf·cm, 19 ft·lbf) for C

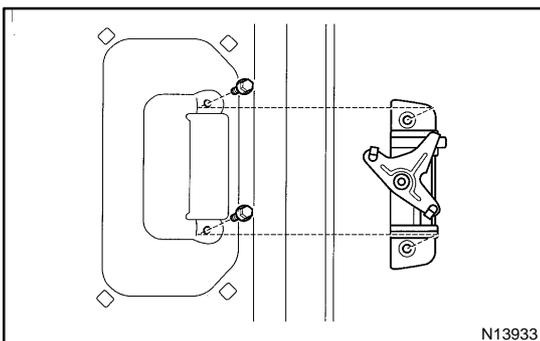

8. REMOVE TAIL GATE LOCK CONTROL

Remove the 2 bolts and tail gate lock control.