


REMOVAL

1. REMOVE INNER REAR VIEW MIRROR
2. REMOVE SUN VISORS AND HOLDERS
3. REMOVE ASSIST GRIPS
4. REMOVE QUARTER TRIM (See page [BO-45](#))
5. REMOVE FRONT PILLAR GARNISHES
6. REMOVE COWL LOUVER (See page [BO-27](#))
7. REMOVE WIPER ARMS (See page [BO-27](#))

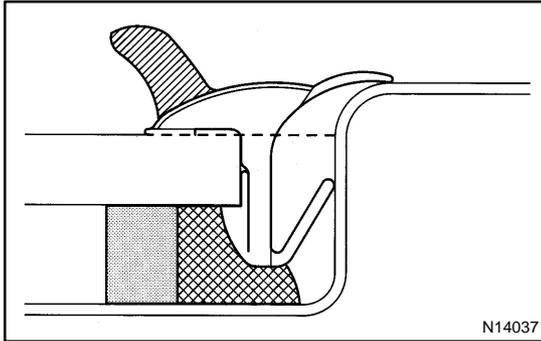


8. REMOVE WINDSHIELD OUTSIDE UPPER MOULDING
 - (a) Using a knife, cut off the moulding, as shown in the illustration.

NOTICE:

Do not damage the body with the knife.

- (b) Remove the remaining moulding.

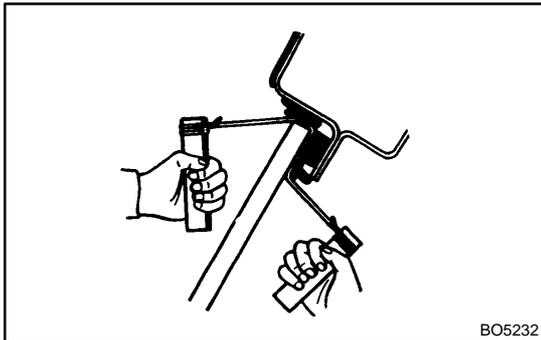


9. REMOVE WINDSHIELD GLASS

- (a) Push piano wire through between the body and glass from the interior.

- (b) Tie both wire ends to a wooden block or similar object.

HINT:

Apply protective tape to the outer surface to keep the surface from being scratched.

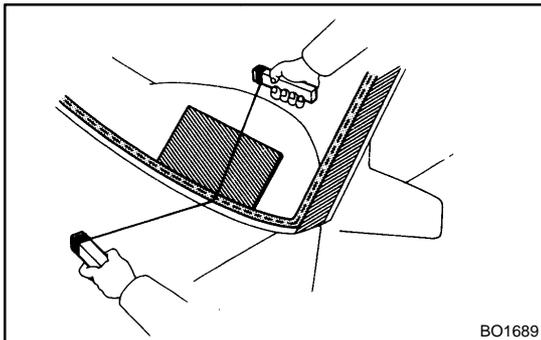

NOTICE:

When separating the glass, take care not to damage the paint and interior and exterior ornaments. To prevent scratching the safety pad when removing the windshield, place a plastic sheet between the piano wire and safety pad.

- (c) Cut the adhesive by pulling the piano wire around it.

- (d) Remove the glass.

NOTICE:

Leave as much of the adhesive on the body as possible when cutting off the glass.