

REMOVAL

1. Large Over Fender:


REMOVE FRONT FENDER WHEEL OPENING MOULDING

- (a) Remove the 3 bolts and mudguard.
- (b) Remove the 5 screws, nut and front fender wheel opening moulding.

2. Small Over Fender:

REMOVE FRONT FENDER WHEEL OPENING MOULDING

- (a) Remove the 3 bolts and mudguard.
- (b) Remove the 6 screws, nut and front fender wheel opening moulding.

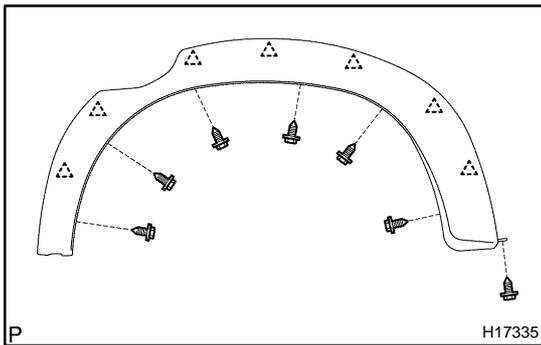

3. Large Over Fender:

REMOVE QUARTER WHEEL OPENING MOULDING

Remove the 7 screws and quarter wheel opening moulding.

4. Small Over Fender:

REMOVE QUARTER WHEEL OPENING MOULDING

Remove the 6 screws and quarter wheel opening moulding.