


INSTALLATION


1. INSTALL BRAKE BOOSTER

- (a) Install a new gasket to the brake booster.
- (b) Install the brake booster bracket and 2 stopper rings to the brake booster.
- (c) Install a new gasket and the booster with the 4 nuts.
Torque: 13 N·m (130 kgf·cm, 9 ft·lbf)
- (d) Install the clevis to the operating rod.
- (e) Install the clevis pin into the clevis and brake pedal, and install the clip to the clevis pin.
- (f) Connect the vacuum hose to the brake booster.

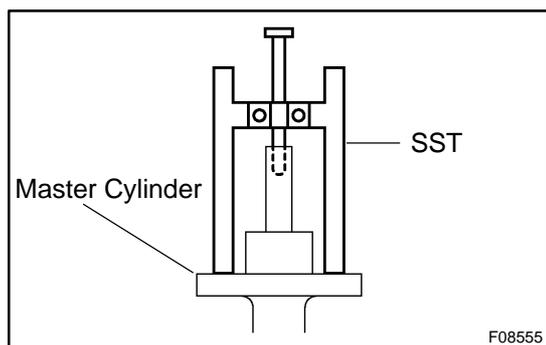


2. ADJUST LENGTH OF BOOSTER PUSH ROD

- (a) Set the SST on the master cylinder, and lower the pin until its tip slightly touches the piston.
SST 09737-00011

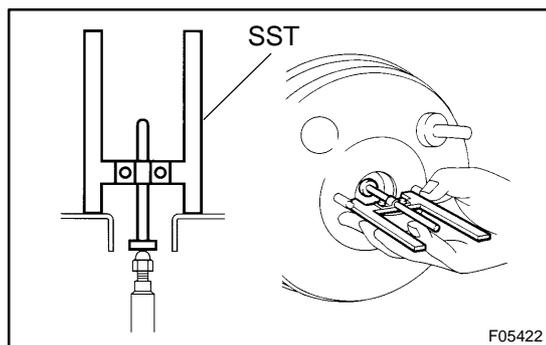

- (b) Turn the SST upside down, and set it on the booster.
SST 09737-00011
- (c) Measure the clearance between the booster push rod and pin head (SST).
Clearance: 0 mm (0 in.)

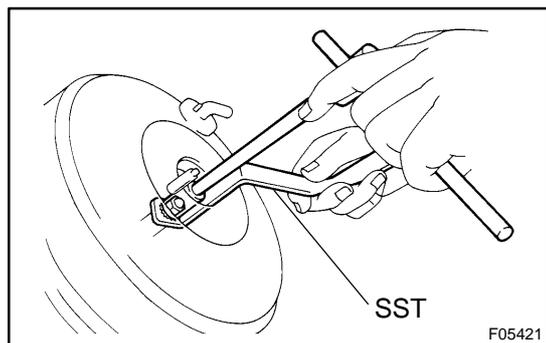

- (d) Using SST, adjust the booster push rod length until the push rod lightly touches the pin head.
SST 09737-00020

3. **INSTALL MASTER CYLINDER** (See page [BR-14](#))
4. **FILL BRAKE RESERVOIR WITH BRAKE FLUID AND BLEED BRAKE SYSTEM** (See page [BR-4](#))
5. **CHECK FOR FLUID LEAKAGE**
6. **CHECK AND ADJUST BRAKE PEDAL**
(See page [BR-6](#))
7. **DO OPERATIONAL CHECK** (See page [BR-15](#))