

REMOVAL

REMOVE SPEED SENSOR


- (a) Disconnect the speed sensor connector.
- (b) Remove the 2 (4WD and pre runner) or 4 (2WD (except pre runner)) clamp bolts holding the sensor harness from the steering knuckle, upper arm and side rail.

Torque:

Upper arm, steering knuckle:

8.0 N·m (82 kgf·cm, 71 in.-lbf)

Side rail: 13 N·m (130 kgf·cm, 9 ft-lbf)

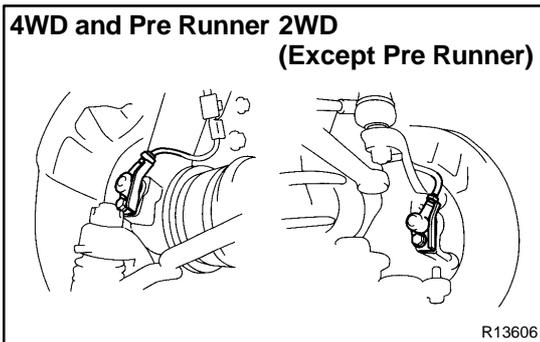

- (c) Remove the speed sensor installation bolt from the steering knuckle.

Torque: 8.0 N·m (82 kgf·cm, 71 in.-lbf)

NOTICE:

At the time of installation, please refer to the following items.

- There are no foreign objects on the sensor or the part of the knuckle to which the sensor is to be installed.
- The sensor is installed flat against the knuckle when you tighten the bolt.
- When installing the resin clips, use new ones.