


REMOVAL

1. **DISCONNECT SHACKLE NO. 2 FROM BRACKET**
 - (a) Remove the nut and disconnect the shackle No. 2.
 - (b) Remove the cushion retainer, 2 cushions and collar.

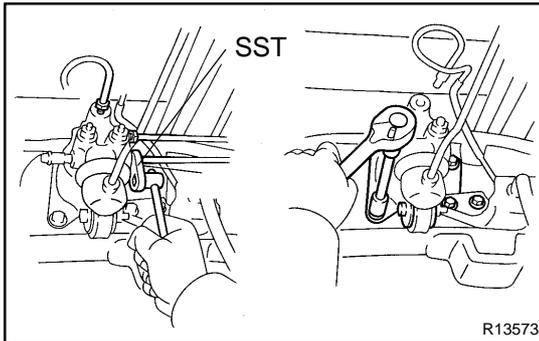

2. **REMOVE LSP & BV ASSEMBLY**
 - (a) Using SST, disconnect the brake lines from the valve body.
SST 09023-00100
 - (b) 2WD (except pre runner):
Remove the clip from the flexible hose bracket.
 - (c) 2WD (except pre runner):
Remove the 3 valve bracket mounting bolts and spacer, and remove the LSP & BV assembly.
 - (d) 4WD and pre runner:
Remove the 3 valve bracket mounting bolts, spacer and flexible hose bracket mounting bolt, and remove the LSP & BV assembly and flexible hose bracket.