

INSTALLATION

Installation is in the reverse order of removal (See page [BR-62](#)).

NOTICE:

After installation, check the speed sensor signal (See page [DI-534](#)).