


REMOVAL

REMOVE SPEED SENSOR

- (a) Disconnect the speed sensor connector, and pull out the sensor wire harness with grommet.
- (b) Remove the 5 resin clips, 2 clamp set bolts and 2 nuts holding the sensor wire harness from the side rail, fuel tank and axle housing.

Torque: 13 N·m (130 kgf-cm, 9 ft-lbf)

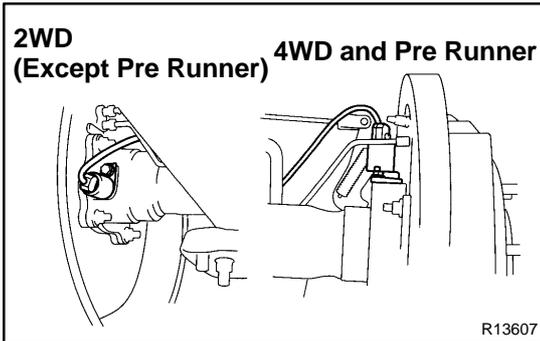

- (c) Remove the 2 mounting bolts and speed sensor.

Torque: 8.0 N·m (82 kgf-cm, 71 in.-lbf)

NOTICE:

At the time of installation, please refer to the following items.

- There are no objects on the sensor or the part of the axle end to which the sensor is to be installed.
- The sensor is installed flat against the axle end when you tighten the bolt.
- When installing the resin clips, use new ones.