


REMOVAL

1. DISCONNECT GENERATOR CONNECTOR AND WIRE

- (a) Disconnect the generator connector.
- (b) Remove the nut, and disconnect the generator wire.
Torque: 9.8 N·m (100 kgf·cm, 7.2 ft·lbf)
- (c) Disconnect the wire harness with the clip.

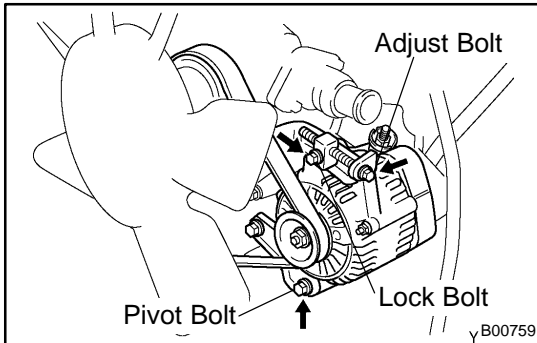

2. REMOVE GENERATOR DRIVE BELT

- (a) Loosen the adjusting lock bolt and pivot bolt.
- (b) Loosen the adjusting bolt, and remove the drive belt.

3. REMOVE GENERATOR

- (a) Remove the pivot bolt and adjusting lock bolt.

Torque:

59 N·m (600 kgf·cm, 43 ft·lbf) for pivot bolt

29 N·m (300 kgf·cm, 21 ft·lbf) for adjusting lock bolt

- (b) Remove the generator.