

INSTALLATION

Installation is in the reverse order of removal (See page [CL-6](#)).

HINT:

After installation, bleed the system and adjust the clutch pedal.