


REMOVAL

1. DISCONNECT CLUTCH LINE

Using SST, disconnect the line. Use a container to catch the fluid.

SST 09023-00100

Torque: 15 N·m (155 kgf·cm, 11 ft·lbf)

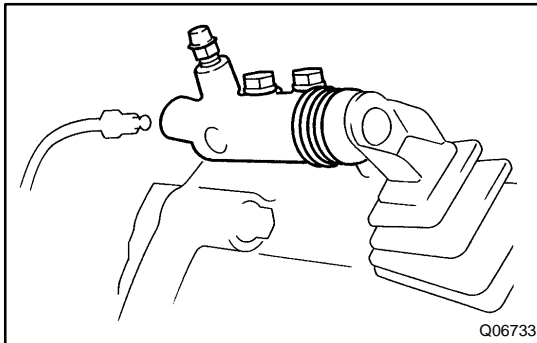

2. REMOVE 2 BOLTS AND PULL OUT RELEASE CYLINDER

Torque: 13 N·m (130 kgf·cm, 9 ft·lbf)