


DISASSEMBLY

1. REMOVE NO.1 FAN SHROUD

Remove the 4 bolts and fan shroud.

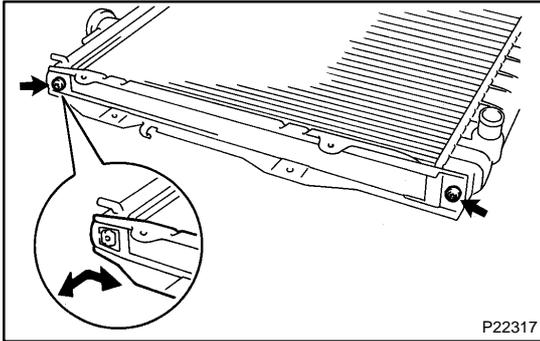

2. REMOVE RADIATOR SUPPORTS

Remove the 4 screws and 2 radiator supports.

HINT:

At the time of assembly, please refer to the following items.
Insert the tabs the radiator upper tank through the radiator support holes.

Torque: 5.5 N·m (55 kgf·cm, 49 in.-lbf)