



## REMOVAL

1. DRAIN ENGINE COOLANT
2. REMOVE RADIATOR GRILLE (See page [BO-8](#))

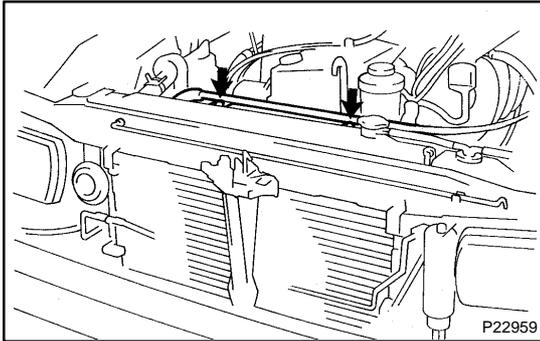


### 3. DISCONNECT AIR PIPE

Remove the 2 bolts and disconnect the air pipe.

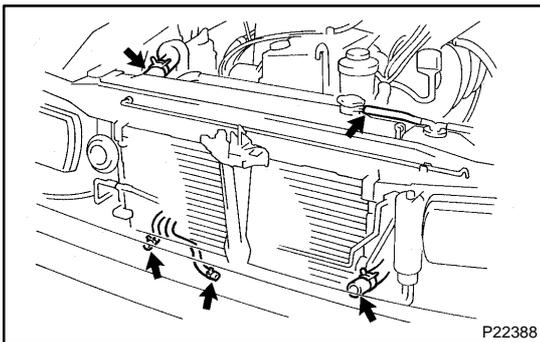

4. DISCONNECT UPPER RADIATOR HOSE
5. DISCONNECT RADIATOR RESERVOIR HOSE
6. DISCONNECT LOWER RADIATOR HOSE
7. REMOVE NO.2 FAN SHROUD
8. A/T:  
DISCONNECT OIL COOLER HOSES

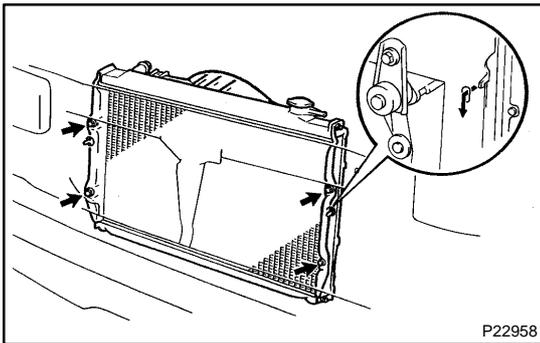

### 9. REMOVE RADIATOR

Remove the 4 bolts and radiator.

**Torque: 12.5 N·m (125 kgf·cm, 9 ft·lbf)**

HINT:

At the time of installation, please refer to the following items.  
Insert the tabs of the radiator support through the radiator service holes.