



INSTALLATION

1. INSTALL THERMOSTAT

- (a) Place a new gasket to the thermostat.
- (b) Align the jiggle valve of the thermostat with the protrusion of the water inlet housing, and insert the thermostat in the water inlet housing.

HINT:

The jiggle valve may be set within 15° of either side of the prescribed position.

- (c) Install the water inlet with the 2 nuts.

HINT:

Facing the top mark (protrusion) upward.

Torque: 20 N·m (200 kgf-cm, 15 ft-lbf)

2. CONNECT LOWER RADIATOR HOSE
3. FILL WITH ENGINE COOLANT
4. START ENGINE AND CHECK FOR LEAKS