


REMOVAL

1. DRAIN ENGINE COOLANT

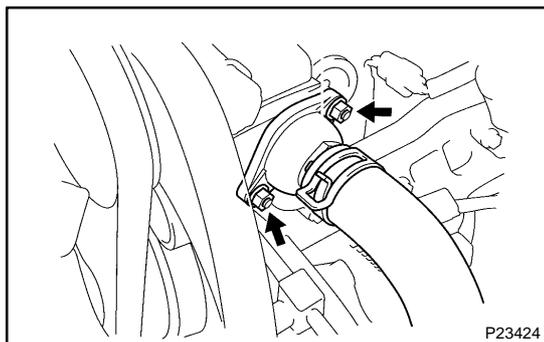

2. DISCONNECT LOWER RADIATOR HOSE

3. REMOVE THERMOSTAT

- (a) Remove the 2 nuts, water inlet and thermostat with gasket from the water pump.
- (b) Remove the gasket from the thermostat.