

INSPECTION


1. INSPECT WATER PUMP

- (a) Visually check the air hole and drain hole for coolant leakage.

If leakage is found, replace the water pump.

- (b) Turn the pulley, and check that the water pump bearing moves smoothly and quietly.

If necessary, replace the water pump.

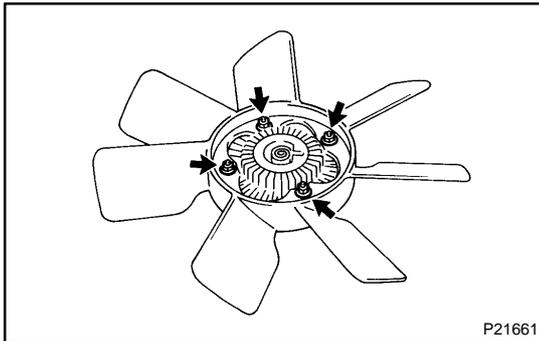

2. INSPECT FLUID COUPLING

- (a) Remove the 4 nuts and fan from the fluid coupling.
- (b) Check the fluid coupling for damage and silicon oil leakage.

If necessary, replace the fluid coupling.

- (c) Install the fan and fluid coupling with the 4 nuts.

Torque: 5.5 N·m (55 kgf·cm, 49 in.-lbf)