


## DISASSEMBLY

### 1. REMOVE NO.1 FAN SHROUD

Remove the 4 bolts and No.1 fan shroud.

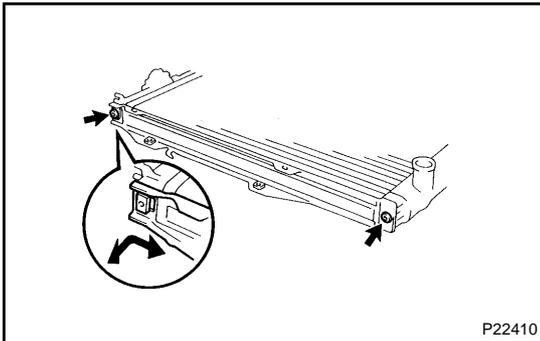

### 2. REMOVE RADIATOR SUPPORTS

Using a torx wrench, remove the 4 torx screws and the 2 radiator supports.

Torx wrench: T30 (Part No. 09042-00010 or locally manufactured tool)

HINT:

Lift up the floor carpet and loosen the screw.