


# ABS Warning Light Circuit

## CIRCUIT DESCRIPTION

If the ECU detects trouble, it lights the ABS warning light while at the same time prohibiting ABS control. At this time, the ECU records a DTC in memory.

After removing the short pin of the DLC3, connect terminals Tc and CG of the DLC3 to make the ABS warning light blink and output the DTC.

## WIRING DIAGRAM

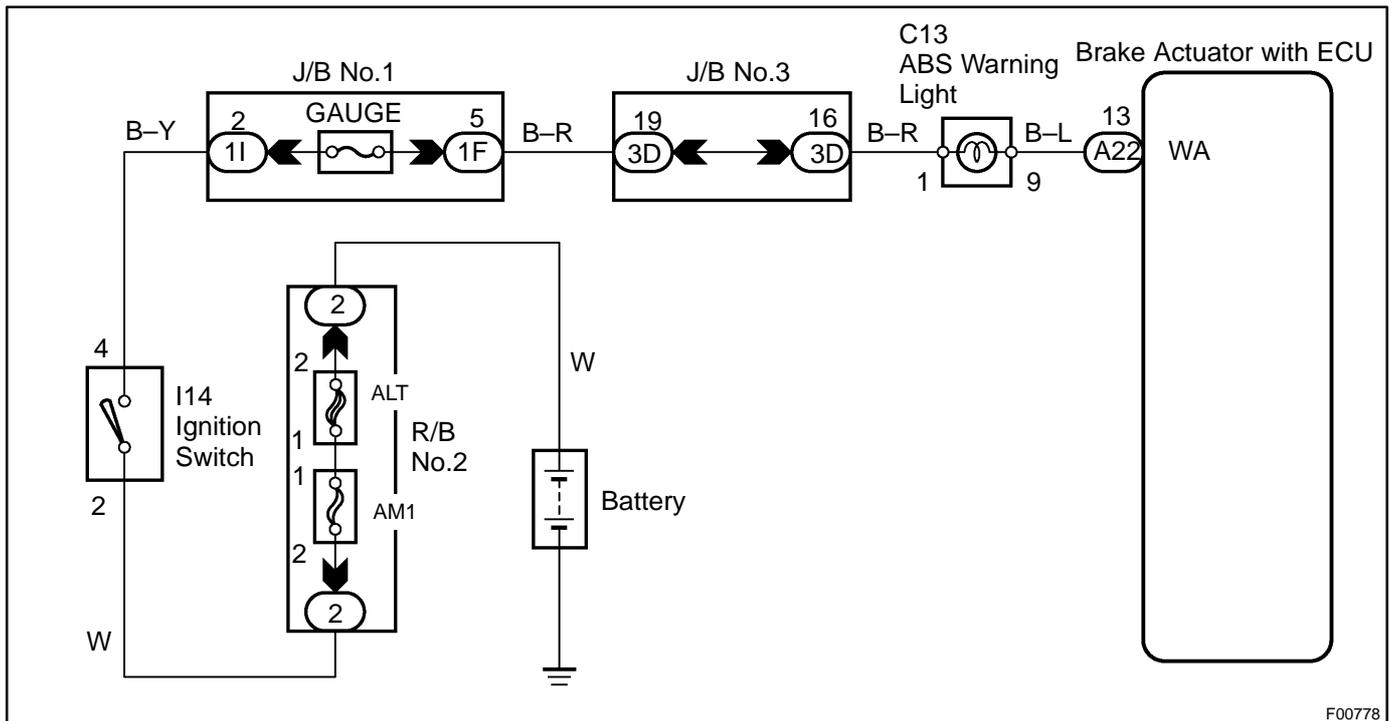

F00778

## INSPECTION PROCEDURE

Troubleshooting in accordance with the chart below for each trouble symptom.

ABS warning light does not light up	Go to step 1
ABS warning light remains on	Go to step 2

**1** Check ABS warning light.

See Combination Meter Troubleshooting on page [BE-2](#).

**NG**

Repair bulb or combination meter assembly.

**OK**

Check for open in harness and connector between GAUGE fuse and skid control ECU  
(See page [IN-28](#)).

**2** Is DTC output?

Check DTC on page [DI-540](#).

**YES**

Repair circuit indicated by the code output.

**NO**

**3** Check for short in harness and connector between GAUGE fuse and skid control ECU (See page [IN-28](#)).

**NG**

Repair or replace harness or connector.

**OK**

Check and repair brake actuator ASSY.