


DTC	C0226 / 21 – C0246 / 23	ABS Solenoid Circuit
------------	--------------------------------	-----------------------------

CIRCUIT DESCRIPTION

This solenoid goes on when signals are received from the ECU and controls the pressure acting on the wheel cylinders thus controlling the braking force.

DTC No.	DTC Detecting Condition	Trouble Area
C0226 / 21 C0236 / 22 C0246 / 23	Detection of any of conditions 1. and 2.: 1. With IG1 terminal voltage at 10V – 16V, solenoid circuit is open or short circuit for 0.05 sec. or longer. 2. With IG1 terminal voltage at 10V – 16V, during ABS control solenoid relay contact is OFF for 0.05 sec. or longer.	<ul style="list-style-type: none"> • Each solenoid circuit • Brake actuator • Wire harness

WIRING DIAGRAM

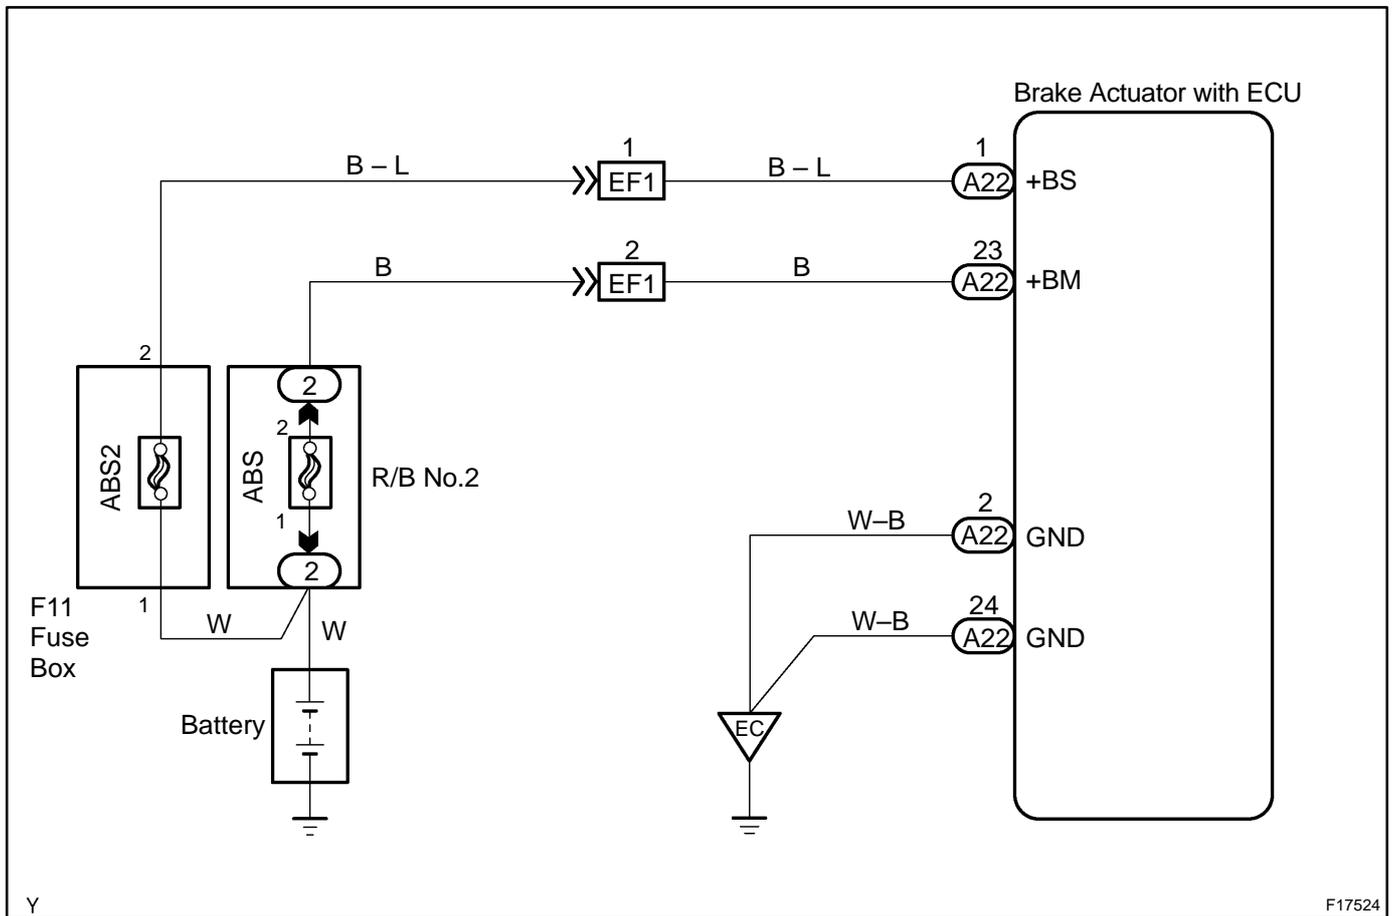

Y

F17524

INSPECTION PROCEDURE

1	Check the DTC once more.
----------	---------------------------------

PREPARATION:

- (a) Clear the DTC (See page [DI-534](#)).
- (b) Turn the ignition switch OFF.

CHECK:

Turn the ignition switch ON, and check if the same DTC is stored in the memory.

