


DTC	C1244 / 44	Deceleration Sensor Circuit
------------	-------------------	------------------------------------

CIRCUIT DESCRIPTION

This sensor detects deceleration on the vehicle. The sensor signal is used in ABS control. If the sensor functions abnormally, the ABS warning light comes on.

DTC No.	DTC Detecting Condition	Trouble Area
C1244 / 44	Either of the following 1., 2. or 3. is detected: 1. The condition that ECU terminals GL1 values are -1.5 G or less or 1.5 G or more continues for 1.2 sec. or more. 2. The condition that the ABS deceleration sensor terminal VGS voltage is 4.4 V or less or 5.6 V or more continues for 1.2 sec. or more. 3. ABS deceleration sensor signal momentary open occurs for 7 times or more.	<ul style="list-style-type: none"> • ABS deceleration sensor • Deceleration sensor circuit • Wire harness

WIRING DIAGRAM

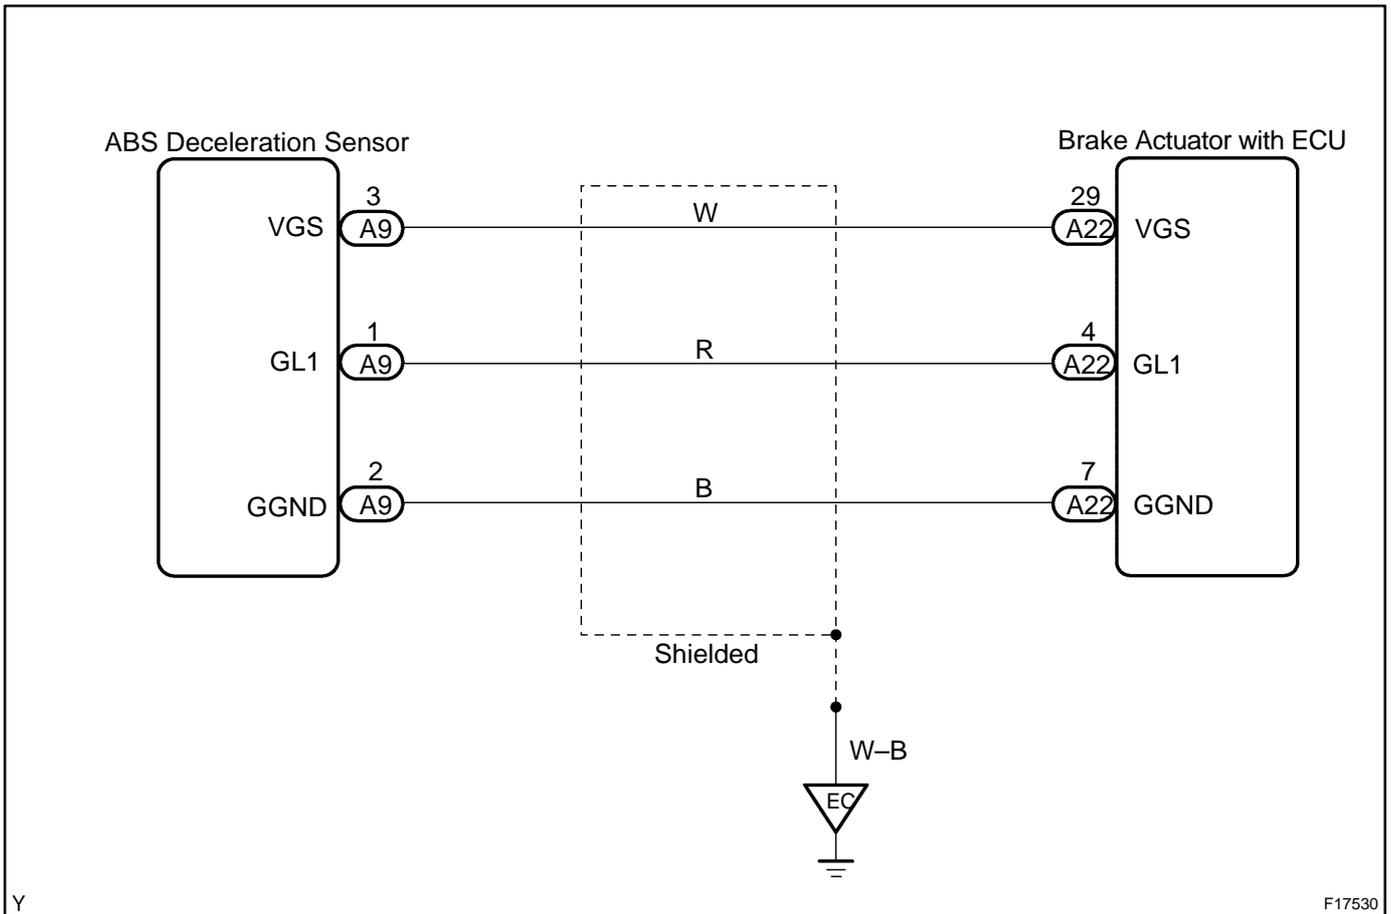

Y

F17530

INSPECTION PROCEDURE

1	Check for open and short circuit in harness and connector between ABS deceleration sensor and skid control ECU (See page IN-28).
----------	---



2	Check ABS deceleration sensor (See page DI-534).
----------	---



Check and replace brake actuator ASSY.