


Tc Terminal Circuit

CIRCUIT DESCRIPTION


Connecting terminals Tc and CG of the DLC3 causes the ECU to display the DTC by flashing the ABS warning light.

WIRING DIAGRAM

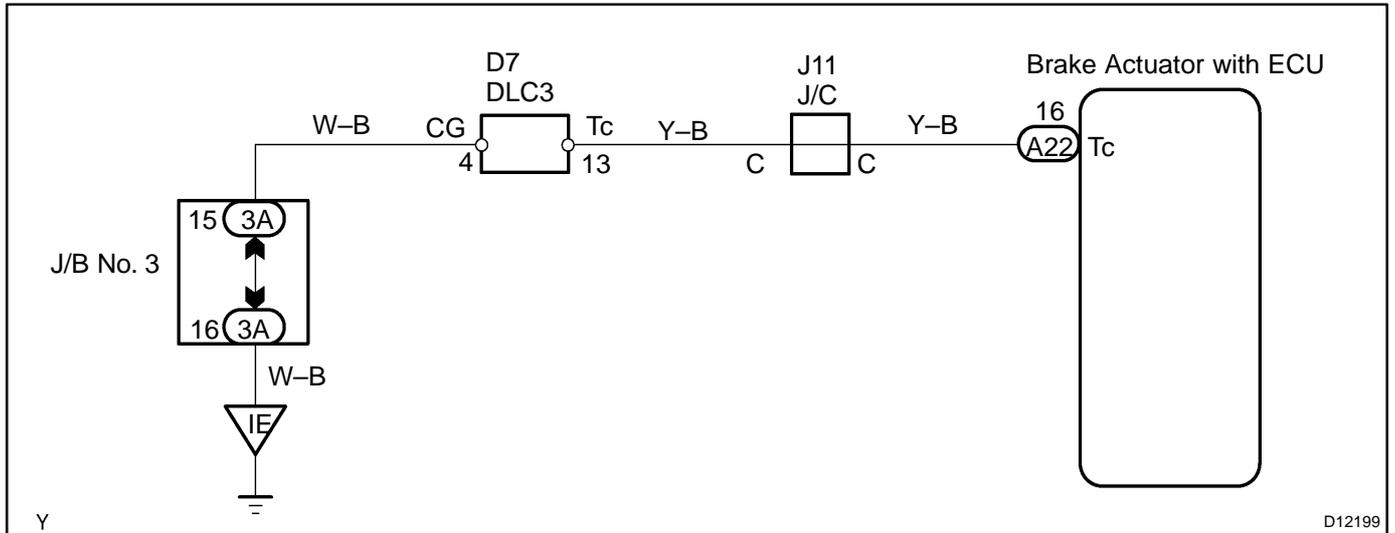

INSPECTION PROCEDURE

- 1 Check voltage between terminals Tc and CG of DLC3.

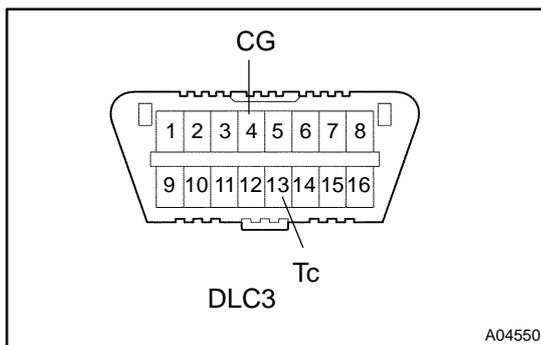

CHECK:

- Turn the ignition switch ON.
- Measure voltage between terminals Tc and CG of DLC3.

OK:

Voltage: 10 – 14 V



If ABS warning light does not blink even after Tc and CG are connected, the ECU may be defective.



2	Check for open and short in harness and connector between skid control ECU and DLC3, DLC3 and body ground (See page IN-28).
---	--

NG

Repair or replace harness or connector.

OK

Check and replace brake actuator ASSY.