

PROBLEM SYMPTOMS TABLE

If a normal code is displayed during the DTC check but the problem still occurs, check the circuits for each problem symptom in the order given in the table below and proceed to the relevant troubleshooting page.

NOTICE:

When replacing skid control ECU, sensor or etc., turn the ignition switch OFF.

Symptom	Suspect Area	See page
ABS does not operate	<p>Only when 1. – 4. are all normal and the problem is still occurring, replace the skid control ECU.</p> <ol style="list-style-type: none"> 1. Reconfirm the DTC and check that the normal code is output. 2. IG power source circuit 3. Speed sensor circuit 4. Check the hydraulic circuit for leakage. 	<p>DI-534</p> <p>DI-561</p> <p>DI-546</p> <p>DI-585</p>
ABS does not operate efficiently	<p>Only when 1. – 4. are all normal and the problem is still occurring, replace the skid control ECU.</p> <ol style="list-style-type: none"> 1. Reconfirm the DTC and check that the normal code is output. 2. Speed sensor circuit 3. Stop light switch circuit 4. Check the hydraulic circuit for leakage. 	<p>DI-534</p> <p>DI-546</p> <p>DI-572</p> <p>DI-585</p>
ABS warning light abnormal	<ol style="list-style-type: none"> 1. ABS warning light circuit 2. Skid control ECU 	<p>DI-579</p> <p>IN-28</p>
DTC check cannot be done	<p>Only when 1. and 2. are all normal and the problem is still occurring, replace the skid control ECU.</p> <ol style="list-style-type: none"> 1. ABS warning light circuit 2. Tc terminal circuit 	<p>DI-579</p> <p>DI-581</p>
Speed sensor signal check cannot be done	<ol style="list-style-type: none"> 1. Ts terminal circuit 2. Skid control ECU 	<p>DI-583</p> <p>IN-28</p>