

AUTOMATIC TRANSMISSION (A340E, A340F)

HOW TO PROCEED WITH TROUBLESHOOTING

DIOSL-38

Items inside  are titles of pages in this manual, with the page number indicated in the bottom portion. See the indicated pages for detailed explanations.

