


Door Lock Control Switch Circuit

CIRCUIT DESCRIPTION

When the door lock control switch is turned to the the lock side, LOCK terminal of the switch is grounded, and when the switch is turned to the unlock side, the UNLOCK terminal is grounded (See the wiring diagram below).

WIRING DIAGRAM

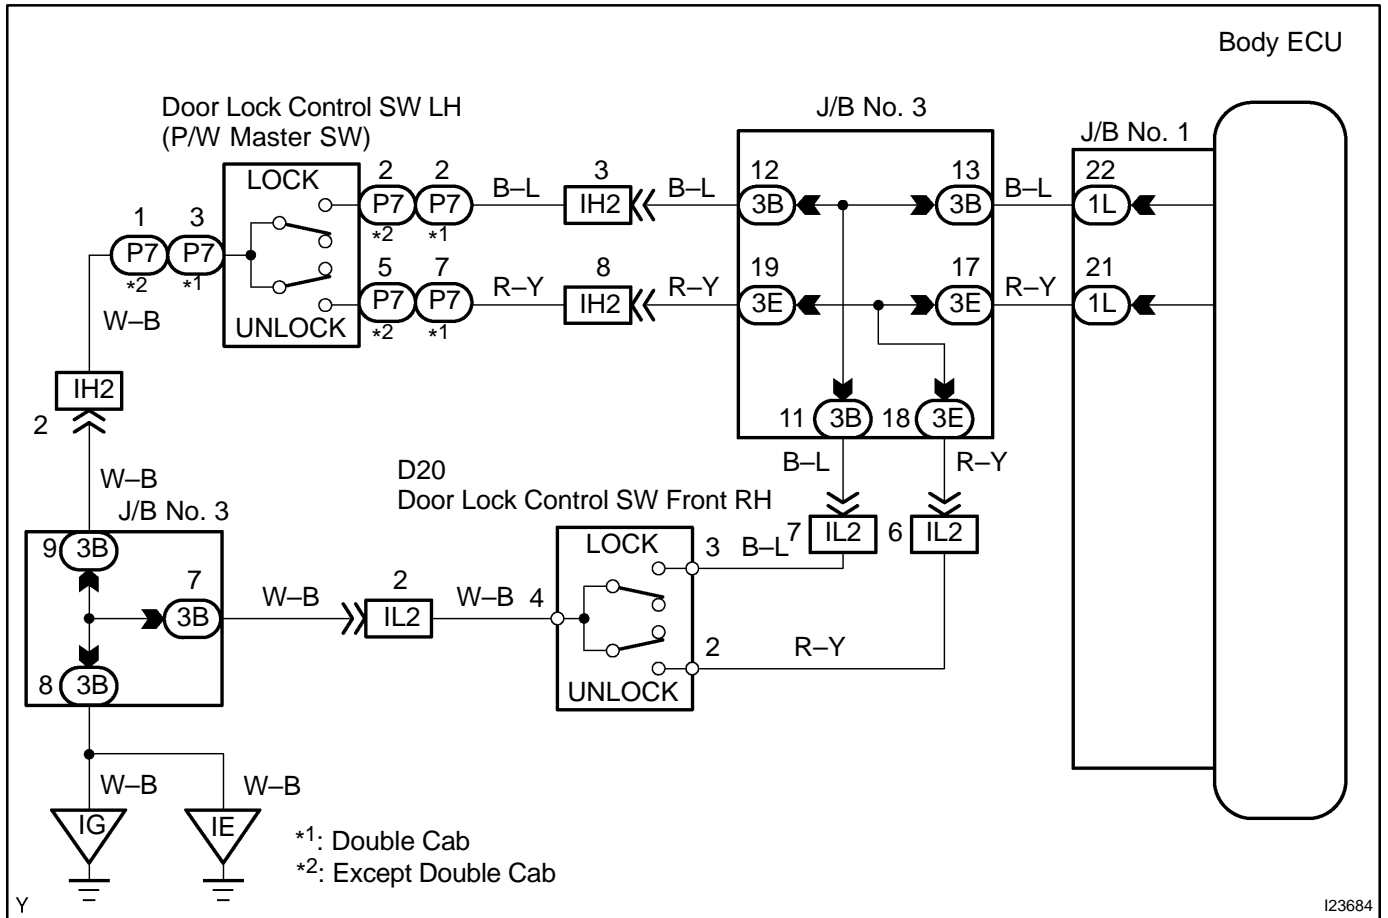

INSPECTION PROCEDURE

1	Check door lock control switch (See page BE-54).
---	---

NG → Replace door lock control switch.

OK

2	Check wireharness and connector between door lock control switch and body ECU (See page IN-28).
----------	--

NG	Repair or replace harness or connector.
-----------	--

OK

3	Check harness and connector between door lock control switch and power window master switch.
----------	---

NG	Repair or replace harness or connector.
-----------	--

OK

Proceed to next circuit inspection shown in problem symptoms table (See page DI-773).
--