


Door Key Lock and Unlock Switch Circuit

CIRCUIT DESCRIPTION

Door key lock and unlock switch is built in the door key cylinder. When the key is turned to the lock side, terminals 6 (LH) and 7 (RH) of the switch is grounded and when the key is turned to the unlock side, terminals 1 (LH) and 4 (RH) of the switch is grounded.

WIRING DIAGRAM

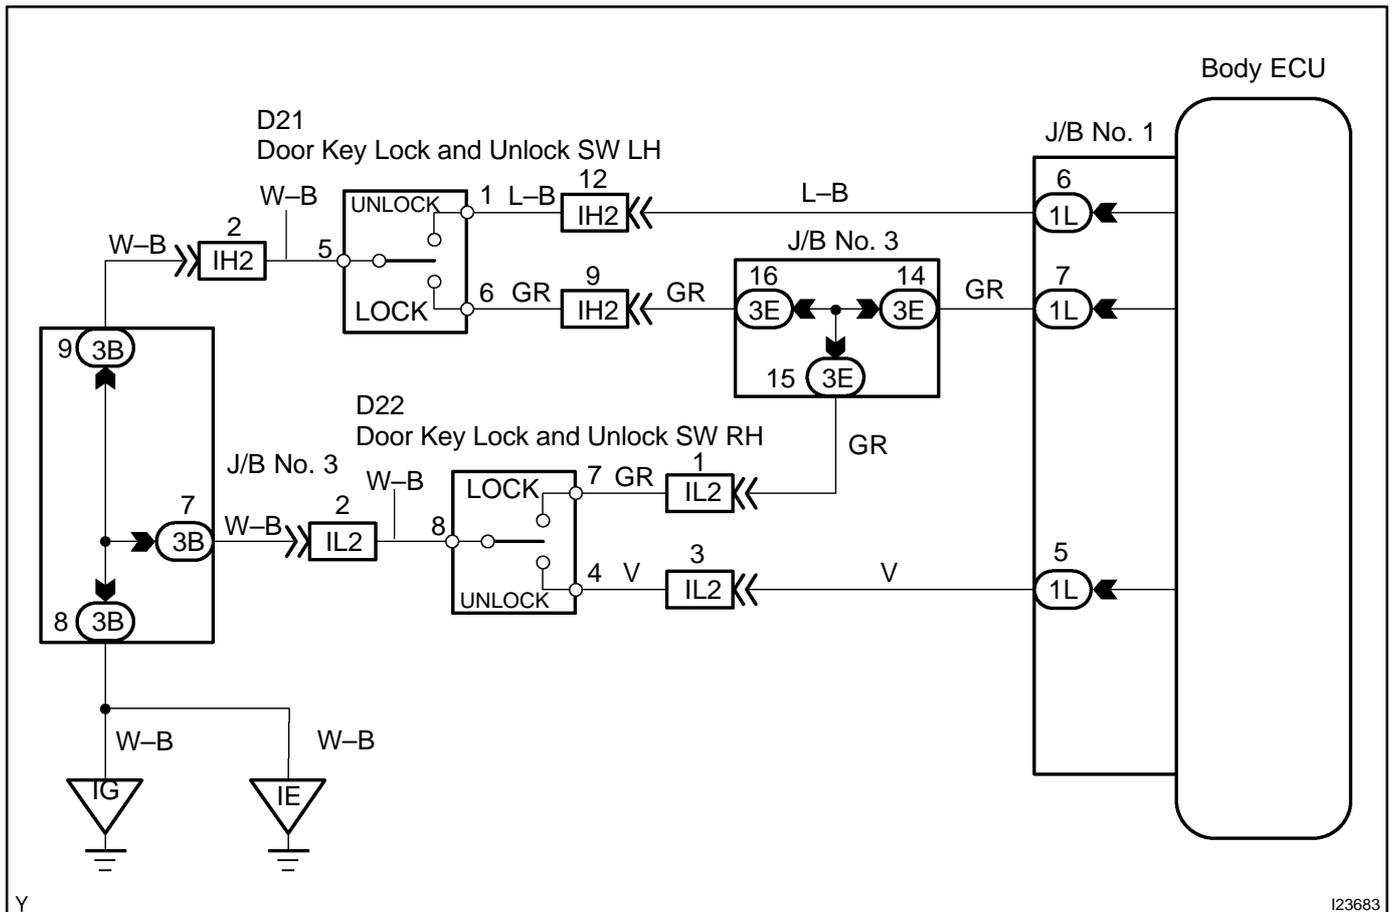

INSPECTION PROCEDURE

- 1 Check door key lock and unlock switch (See page [BE-54](#)).

NG

Replace door key lock and unlock switch.

OK

2	Check for harness and connector between door key lock and unlock switch and body ECU (See page IN-28).
----------	---



Repair or replace harness or connector.



Proceed to next circuit inspection shown in problem symptoms table (See page [DI-773](#)).