


Door Lock Motor Circuit

WIRING DIAGRAM

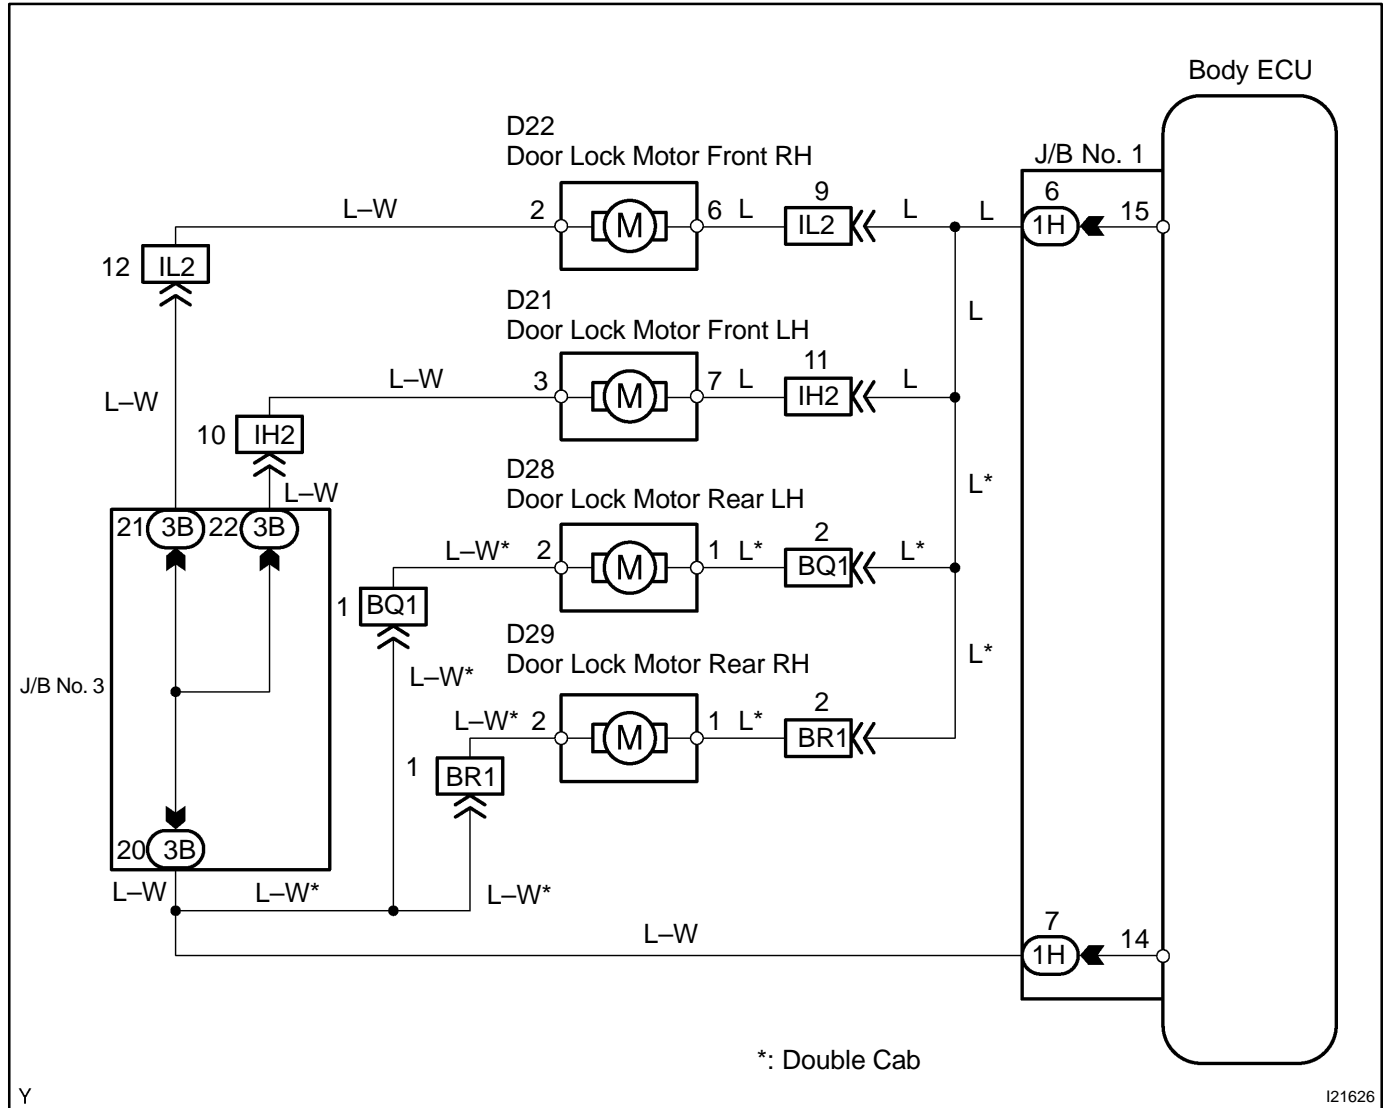

Y

I21626

INSPECTION PROCEDURE

1	Check door lock motor (See page BE-54).
---	--

NG	Replace door lock motor.
----	--------------------------

OK

2	Check for harness and connector between door lock motor and body ECU.
---	---

NG	Repair or replace harness or connector.
----	---

OK

Proceed to next circuit inspection shown in problem symptoms table (See page DI-773).
--