


Driver buckle switch circuit

WIRING DIAGRAM

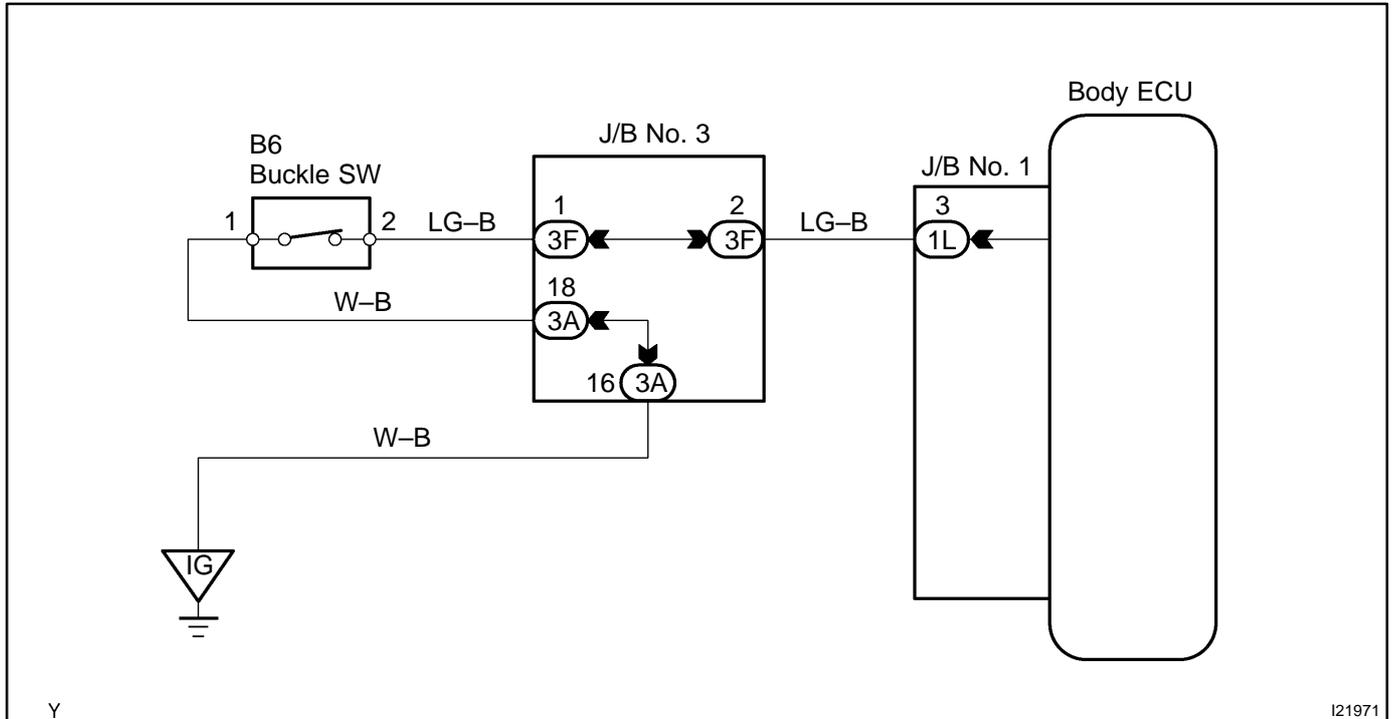

INSPECTION PROCEDURE

HINT:

In case of using a hand-held tester, start the inspection from step 1, and in case of not using a hand-held tester, start it from step 2.

1	Check driver buckle switch using hand-held tester.
----------	---

PREPARATION:

Connect a hand-held tester to the DLC 3.

CHECK:

Check the driver buckle switch, using DATA LIST.

OK

Proceed to next circuit inspection shown on problem symptoms table. (See page [DI-773](#))

NG

2	Check driver buckle switch. (See page BE-39)
----------	---

NG	Replace the driver buckle switch.
-----------	--

OK

3	Check wire harness and connector between driver buckle switch and body ground.
----------	---

NG	Repair or replace wire harness or connector.
-----------	---

OK

Proceed to next circuit inspection shown on problem symptoms table. (See page DI-773)
--