


# Headlight Relay Circuit

## CIRCUIT DESCRIPTION

Headlight relay will be on by operating the headlight switch. The transistor which activates the taillight relay has two sorts: one is activated directly by the headlight switch for fail safe and another is activated by CPU. The one activated by CPU has two systems and prevents the headlight from turning off at the time of one system trouble in the automatic operation circuit.

## WIRING DIAGRAM

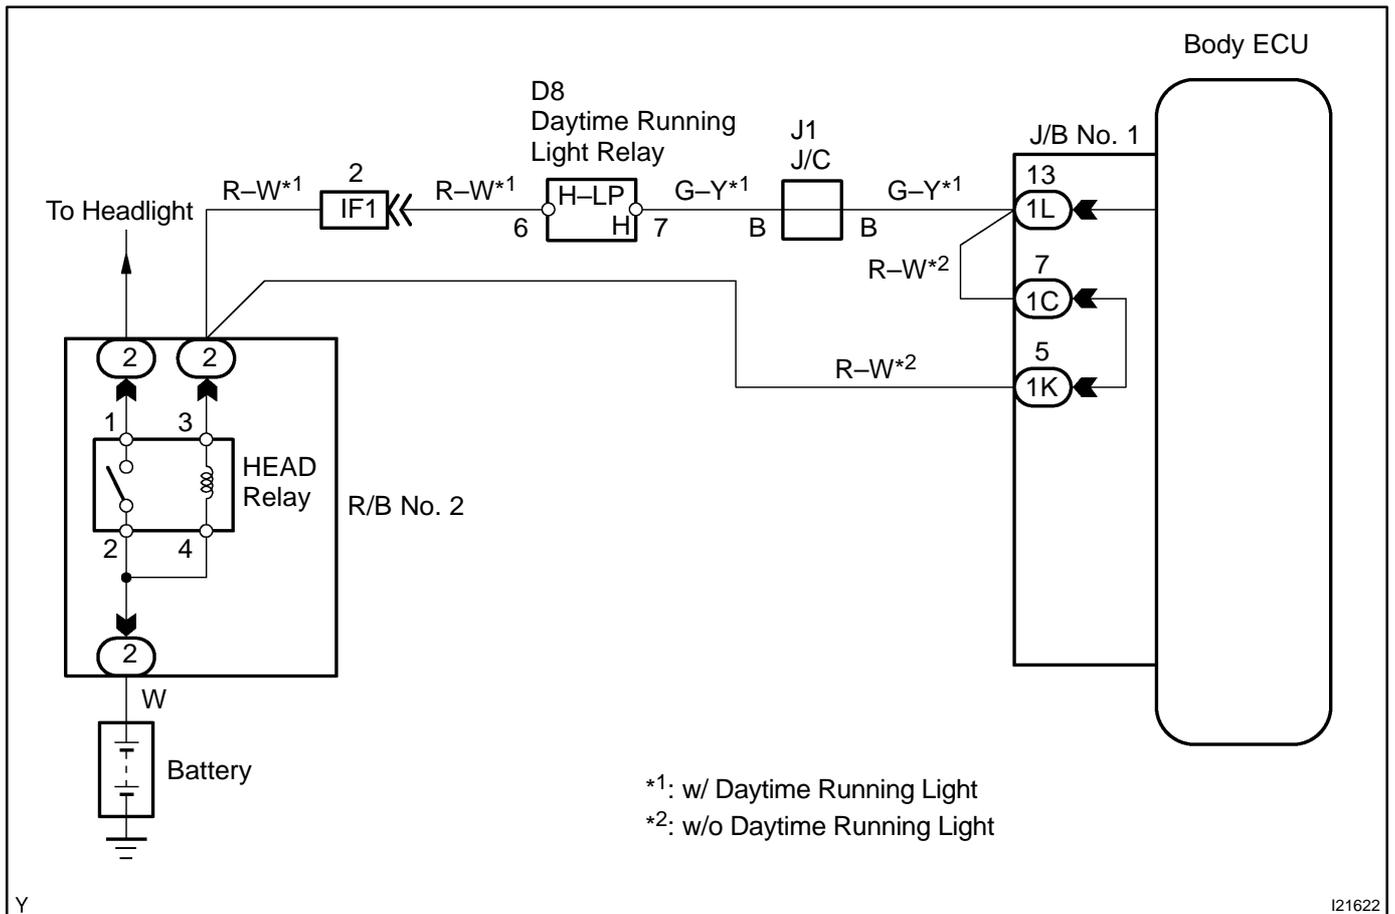

**INSPECTION PROCEDURE**

<b>1</b>	<b>Check headlight relay (See page <a href="#">BE-17</a>).</b>
----------	--



<b>2</b>	<b>Check for harness and connector between headlight relay and body ECU, and battery and headlight relay (See page <a href="#">IN-28</a>).</b>
----------	--



Proceed to next circuit inspection shown in problem symptoms table (See page [DI-773](#)).