


Illumination Circuit

CIRCUIT DESCRIPTION

Receiving the courtesy signal from the body ECU will make the interior light and courtesy light on.

WIRING DIAGRAM

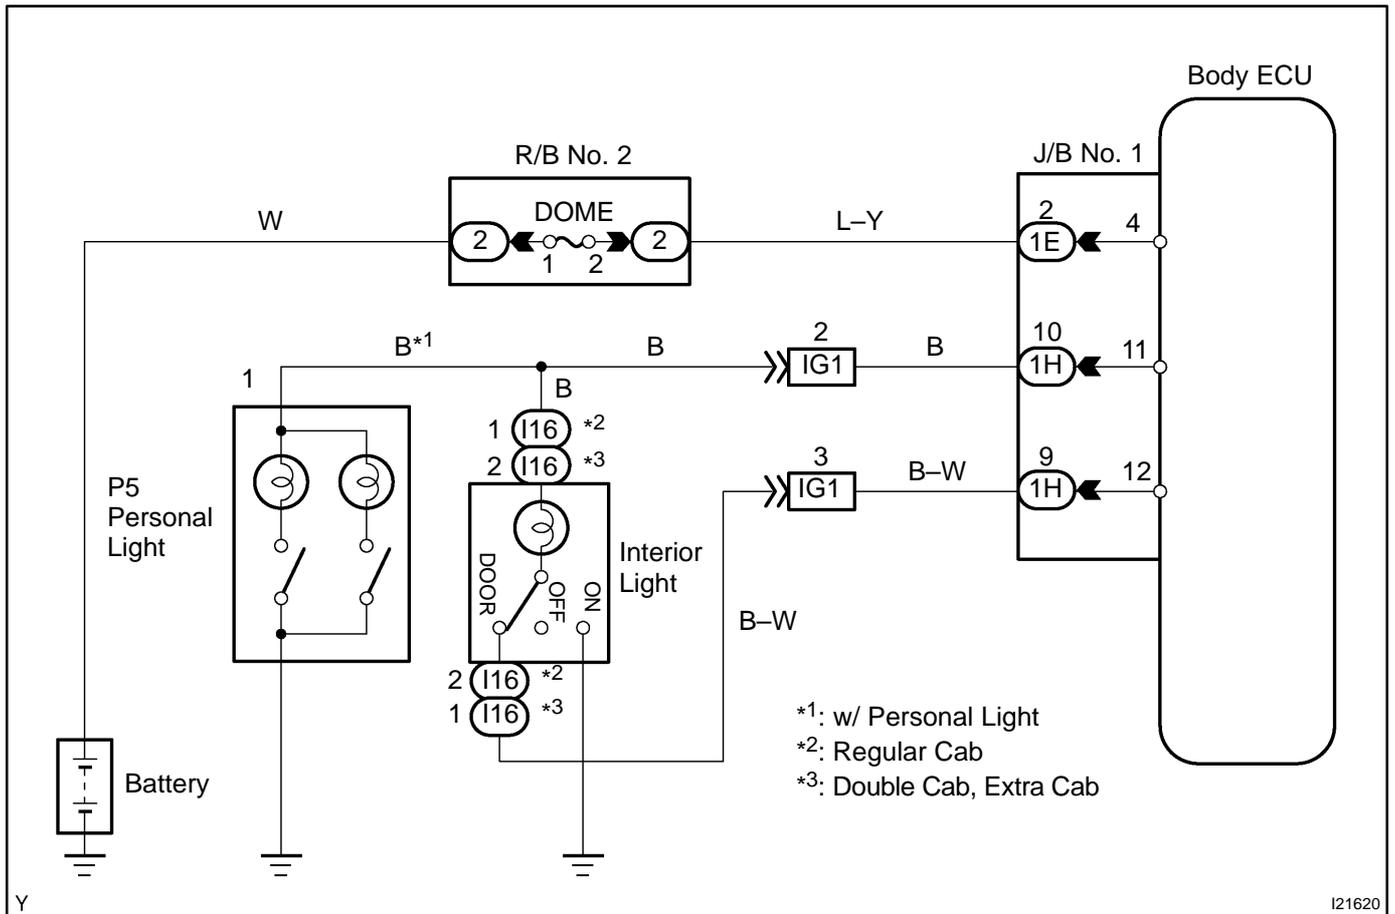

INSPECTION PROCEDURE

1	Check DOME fuse (See page DI-777).
---	---

NG → Replace fuse.

OK

2	Check illumination light.
----------	----------------------------------

NG	Replace failure light.
-----------	-------------------------------

OK

3	Check for harness and connector between each illumination light and body ECU, and battery and each illumination light (See page IN-28).
----------	--

NG	Repair or replace harness or connector.
-----------	--

OK

Proceed to next circuit inspection shown in problem symptoms table (See page DI-773).
--