


Power Main Relay Circuit

CIRCUIT DESCRIPTION

Power main relay (Marking: PWR) will be on by operating the power window switch.

WIRING DIAGRAM

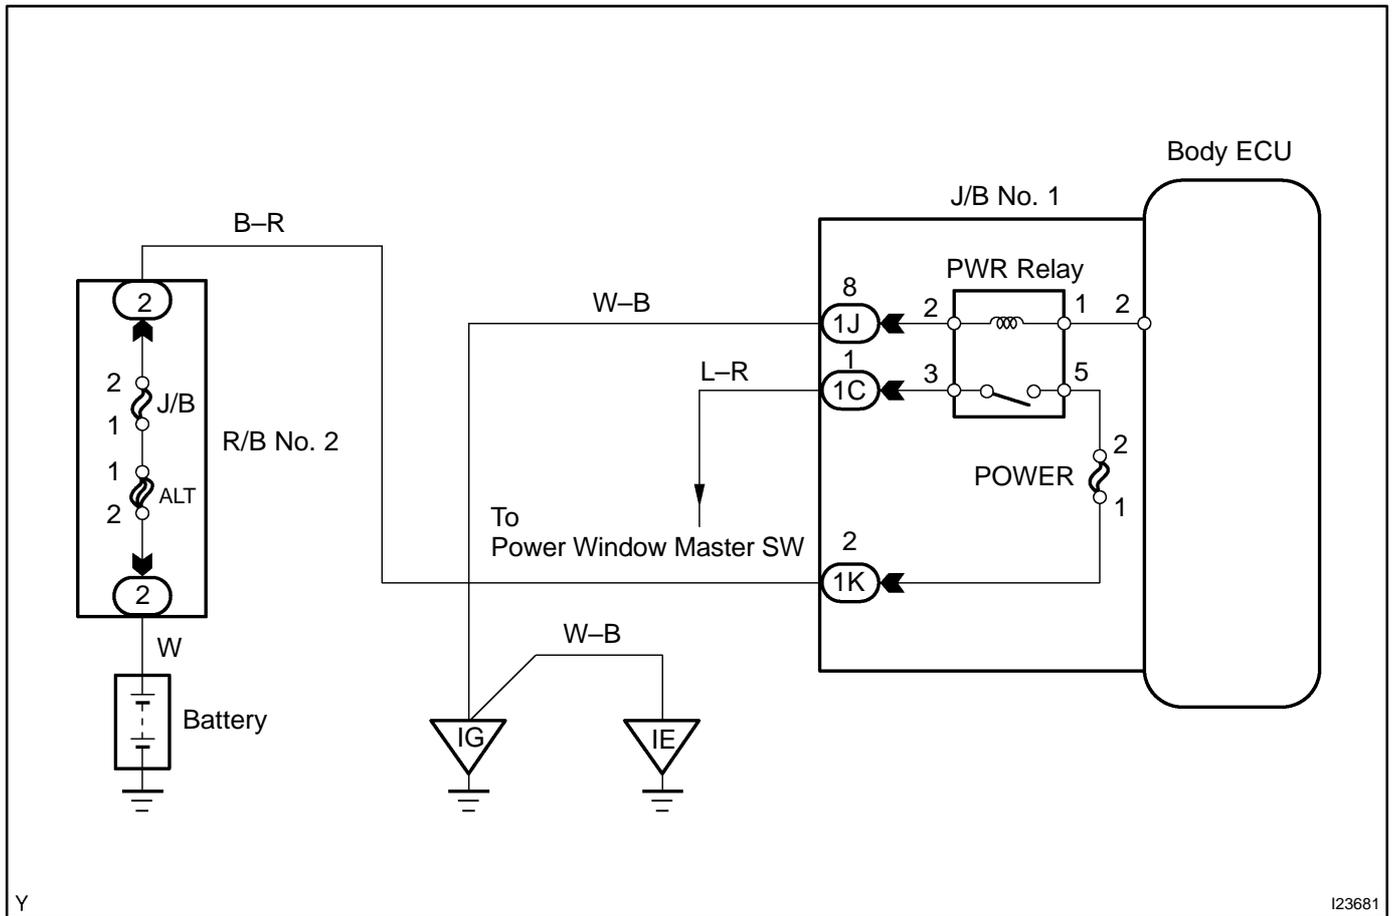

INSPECTION PROCEDURE

1	Check power main relay (Marking: PWR) (See page BE-17).
---	--

NG → Replace power main relay.

OK

2	Check for harness and connector between power main relay (Marking: PWR) and body ECU, and battery and power main relay.
---	---



Repair or replace harness or connector.



Proceed to next circuit inspection shown in problem symptoms table (See page [DI-773](#)).