


Taillight Relay Circuit

CIRCUIT DESCRIPTION

Taillight relay will be on by operating the taillight switch. The transistor which activates the taillight relay has two sorts: one is activated by the taillight switch for fail safe and another is activated by CPU.

WIRING DIAGRAM

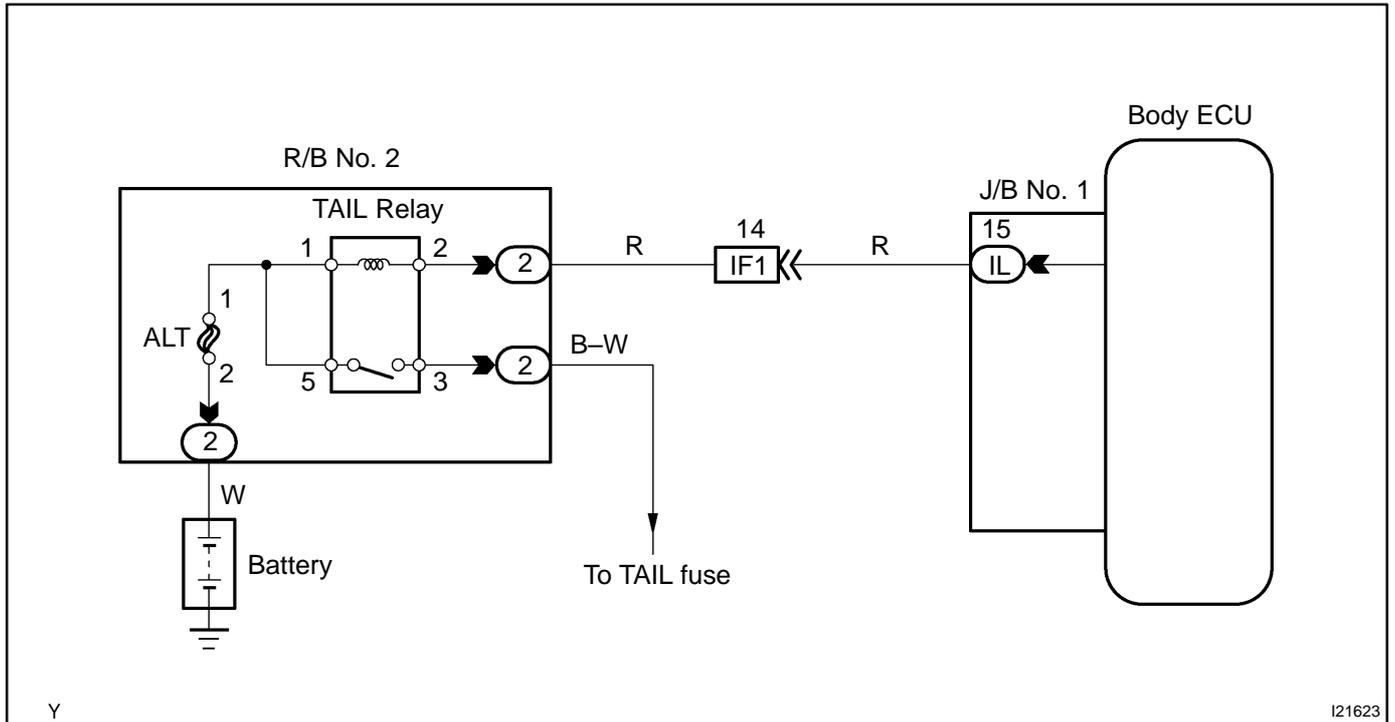

INSPECTION PROCEDURE

| | |
|---|--|
| 1 | Check taillight relay (See page BE-17). |
|---|--|

NG → Replace taillight relay.

OK

| | |
|----------|--|
| 2 | Check for harness and connector between taillight relay and body ECU, and battery and taillight relay (See page IN-28). |
|----------|--|

| | |
|-----------|--|
| NG | Repair or replace harness or connector. |
|-----------|--|

| |
|-----------|
| OK |
|-----------|

| |
|--|
| Proceed to next circuit inspection shown in problem symptoms table (See page DI-773). |
|--|