


CRUISE MAIN Indicator Light Circuit

CIRCUIT DESCRIPTION


When the cruise control main switch is turned ON, the CRUISE MAIN indicator light lights up.

WIRING DIAGRAM

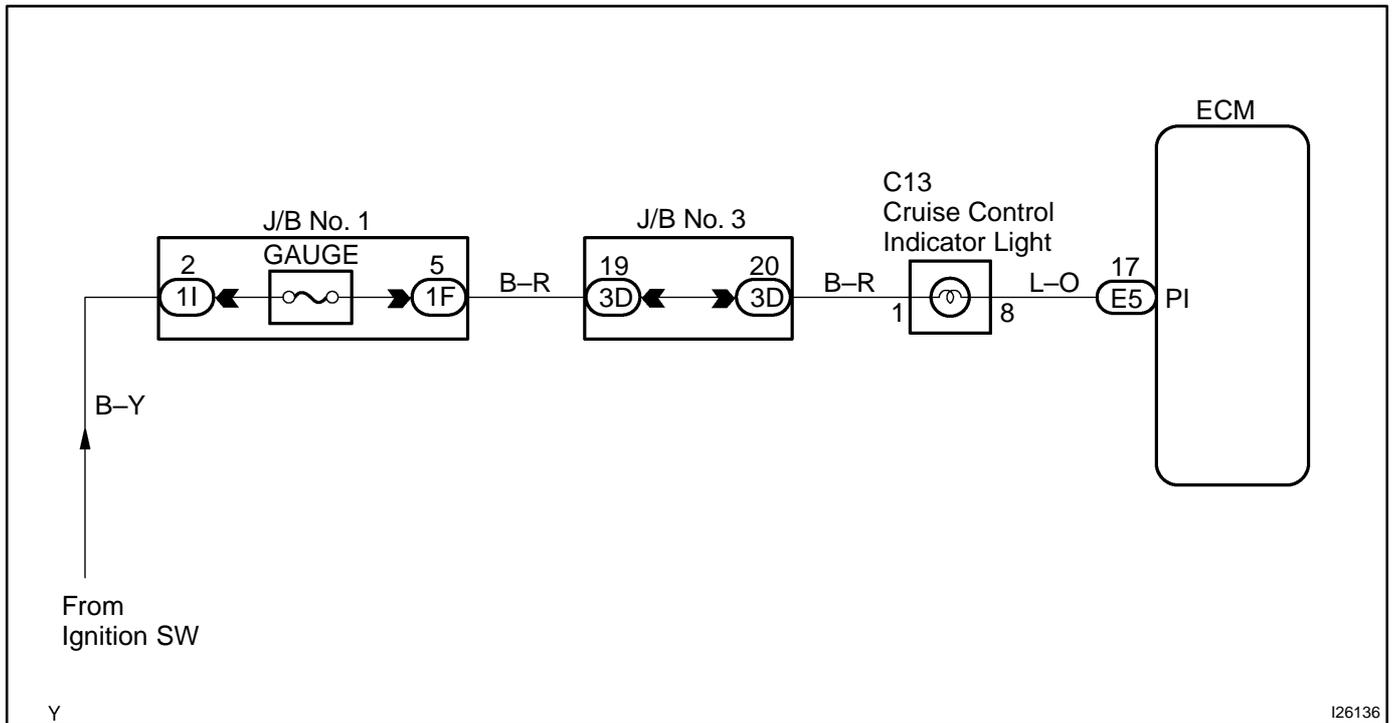

INSPECTION PROCEDURE

1 Check voltage between terminal PI of ECM connector and body ground.

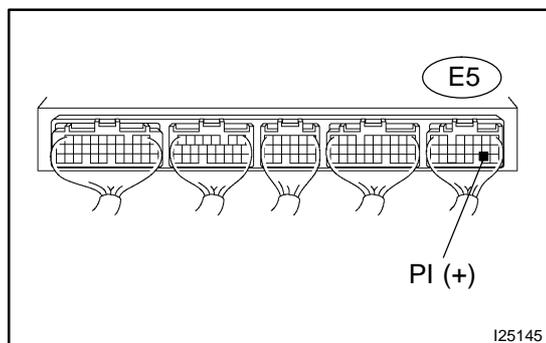**PREPARATION:**

Turn the ignition switch ON.

CHECK:

Measure the voltage between terminal E5-17 (PI) of the ECM connector and the body ground, when the main switch is ON and OFF.

OK:

Switch Position	Voltage
OFF	10 – 16 V
ON	Below 1.2 V

OK

Proceed to next circuit inspection shown in problem symptoms table (See page [DI-700](#)).

NG

2 Check combination meter (See page [BE-2](#)).

NG

Replace combination meter.

OK

Check and replace ECM (See page [IN-28](#)).