

DTC	23	Vehicle Speed Signal Abnormal
------------	-----------	--------------------------------------

CIRCUIT DESCRIPTION

See page [DI-738](#).

DTC No.	DTC Detection Condition	Trouble Area
23	Vehicle speed sensor pulse is abnormal	<ul style="list-style-type: none"> • Vehicle speed sensor • Cruise control ECU

WIRING DIAGRAM

See page [DI-738](#).

INSPECTION PROCEDURE

1	Check vehicle speed sensor (See page BE-39).
---	---



Replace vehicle speed sensor.



Check and replace cruise control ECU (See page [IN-28](#)).