

Actuator Control Cable

INSPECTION PROCEDURE

1	Inspect actuator control cable.
----------	--

CHECK:

- (a) Check that the actuator and control cable throttle link are properly installed and that the cable and link are connected correctly.
- (b) Check that the actuator and bell crank operate smoothly.
- (c) Check that the cable is not loose or not too tight.

OK:

Freeplay: Less than 10 mm (0.39 in.)

HINT:

- If the control cable is very loose, the vehicle's loss of speed will be large while going uphill.
- If the control cable is too tight, the idle RPM will become high.