


Diagnosis Circuit

CIRCUIT DESCRIPTION


This circuit sends a signal to the ECU that outputs a DTC.

WIRING DIAGRAM

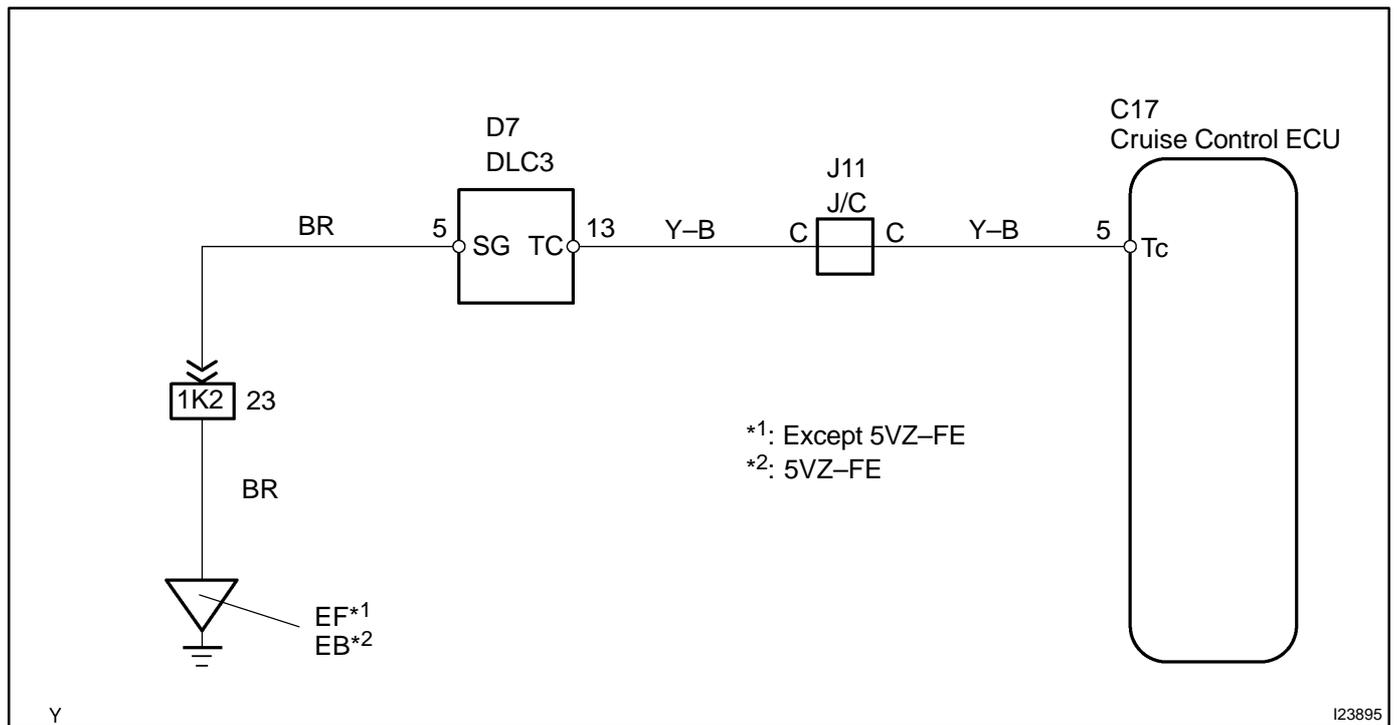

INSPECTION PROCEDURE

1	Check voltage between terminals Tc and E ₁ of DLC1.
---	--

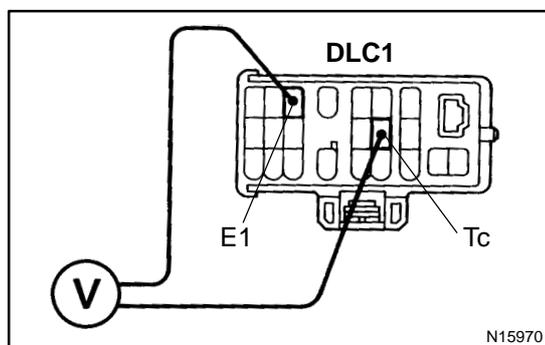

CHECK:

- (a) Turn the ignition switch ON.
- (b) Measure the voltage between terminals Tc and E₁ of the DLC1.

OK:

Voltage: 10 – 14 V



Proceed to next circuit inspection shown on problem symptoms table (See page [DI-730](#)).



2	Check harness and connector between cruise control ECU and DLC1, and DLC1 and body ground (See page IN-28).
----------	--

NG	Repair or replace harness or connector.
-----------	--

OK

Check and replace cruise control ECU (See page IN-28).
