

PROBLEM SYMPTOMS TABLE

Symptom	Suspected Area	See page
SET not occurring or CANCEL occurring (DTC is Normal)	<ol style="list-style-type: none"> 1. Vehicle speed sensor 2. Stop light switch circuit 3. Park/neutral position switch (A/T) Clutch switch circuit (M/T) 4. Actuator motor circuit 5. Cruise control cable 6. Cruise control ECU 	DI-738 DI-745 DI-751 DI-754 DI-731 DI-764 IN-28
SET not occurring or CANCEL occurring (DTC is not output)	<ol style="list-style-type: none"> 1. ECU power source circuit 2. Cruise control ECU 	DI-757 IN-28
Actual vehicle speed deviates above or below the set speed	<ol style="list-style-type: none"> 1. Cruise control cable 2. Vehicle speed signal abnormal 3. Electronically controlled transmission communication circuit 4. Actuator motor circuit 5. Idle signal circuit (Main throttle position sensor) 6. Cruise control ECU 	DI-764 DI-738 DI-748 DI-731 DI-742 IN-28
Gear shifting frequent between 3rd O/D when driving on uphill road (Hurting)	<ol style="list-style-type: none"> 1. Electronically controlled transmission communication circuit 2. Cruise control ECU 	DI-748 IN-28
Cruise control not cancelled, even when brake pedal is depressed	<ol style="list-style-type: none"> 1. Cruise control cable 2. Stop light switch circuit 3. Actuator motor circuit 4. Cruise control ECU 	DI-764 DI-745 DI-731 IN-28
Cruise control not cancelled, even when transmission is shifted to N position	<ol style="list-style-type: none"> 1. Cruise control cable 2. Park/neutral position switch circuit 3. Actuator motor circuit 4. Cruise control ECU 	DI-764 DI-751 DI-731 IN-28
Control switch does not operate (SET/COAST, ACC/RES, CANCEL not possible)	<ol style="list-style-type: none"> 1. Cruise control cable 2. Actuator motor circuit 3. Cruise control ECU 	DI-764 DI-731 IN-28
SET possible at 40 km/h (25 mph) or less, or CANCEL does not operate at 40 km/h (25 mph) or less	<ol style="list-style-type: none"> 1. Cruise control cable 2. Vehicle speed signal abnormal 3. Actuator motor circuit 4. Cruise control ECU 	DI-764 DI-738 DI-731 IN-28
Poor response in ACC and RES modes	<ol style="list-style-type: none"> 1. Cruise control cable 2. Electronically controlled transmission communication circuit 3. Actuator motor circuit 4. Cruise control ECU 	DI-764 DI-748 DI-731 IN-28
O/D does not resume, even though the road is not uphill	<ol style="list-style-type: none"> 1. Electronically controlled transmission communication circuit 2. Cruise control ECU 	DI-748 IN-28
DTC memory erased	<ol style="list-style-type: none"> 1. Cruise control ECU 	IN-28
DTC is not output, or is output when should not be	<ol style="list-style-type: none"> 1. Diagnosis circuit 2. Cruise control ECU 	DI-762 IN-28
Cruise main indicator light remains on or falls to lighting up	<ol style="list-style-type: none"> 1. Cruise main indicator light switch circuit 2. Cruise control ECU 	DI-760 IN-28