

<b>DTC</b>	<b>P0121</b>	<b>Throttle Pedal Position Sensor/Switch "A" Circuit Range/Performance Problem</b>
------------	--------------	--

## CIRCUIT DESCRIPTION

Refer to DTC P0120 on page [DI-44](#).

HINT:

This is the procedure of throttle position sensor.

DTC No.	DTC Detection Condition	Trouble Area
P0121	While vehicle speed drops from 30 km/h (19 mph) or more to 0 km/h (0 mph), output value of throttle position sensor is out of applicable range (2 trip detection logic)	• Throttle position sensor

## INSPECTION PROCEDURE

HINT:

Read freeze frame data using the hand-held tester or the OBD II scan tool, as freeze frame data records the engine conditions when a malfunction is detected. When troubleshooting, it is useful for determining whether the vehicle was running or stopped, the engine was warmed up or not, the air-fuel ratio was lean or rich, etc. at the time of the malfunction.

<b>1</b>	<b>Are there any other codes (besides DTC P0121) being output?</b>
----------	--

YES

Go to relevant DTC chart (See page [DI-16](#)).

NO

Replace throttle position sensor.