

PROBLEM SYMPTOMS TABLE

Symptom	Suspect Area	See page
Engine does not crank (Does not start)	8. Starter 9. Starter relay	ST-16 ST-18
No initial combustion (Does not start)	1. ECM power source circuit 2. Fuel pump control circuit 3. ECM	DI-206 DI-210 IN-28
No complete combustion (Does not start)	1. Fuel pump control circuit	DI-210
Engine cranks normally (Difficult to start)	1. Starter signal circuit 2. Fuel pump control circuit 3. Compression	DI-175 DI-210 EM-3
Cold engine (Difficult to start)	1. Starter signal circuit 2. Fuel pump control circuit	DI-175 DI-210
Hot engine (Difficult to start)	1. Starter signal circuit 2. Fuel pump control circuit	DI-175 DI-210
High engine idle speed (Poor idling)	1. ECM power source circuit	DI-206
Low engine idle speed (Poor idling)	1. Fuel pump control circuit	DI-210
Rough idling (Poor idling)	1. Compression 2. Fuel pump control circuit	EM-3 DI-210
Hunting (Poor idling)	1. ECM power source circuit 2. Fuel pump control circuit	DI-206 DI-210
Hesitation/Poor acceleration (Poor driveability)	1. Fuel pump control circuit 2. A/T faulty	DI-210 DI-476
Surging (Poor driveability)	1. Fuel pump control circuit	DI-210
Soon after starting (Engine stall)	1. Fuel pump control circuit	DI-210
During A/C operation (Engine stall)	1. ECM	IN-28