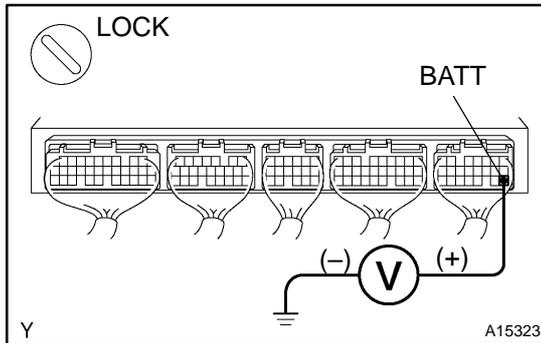


1 Check voltage between terminal BATT of ECM connector and body ground.

**PREPARATION:**

Remove the glove compartment (See page [SF-63](#)).

CHECK:

Measure the voltage between terminal BATT of the ECM connector and the body ground.

OK:


Voltage: 9 - 14 V

OK

Check and replace ECM (See page [IN-28](#)).

NG

2 Check EFI fuse.

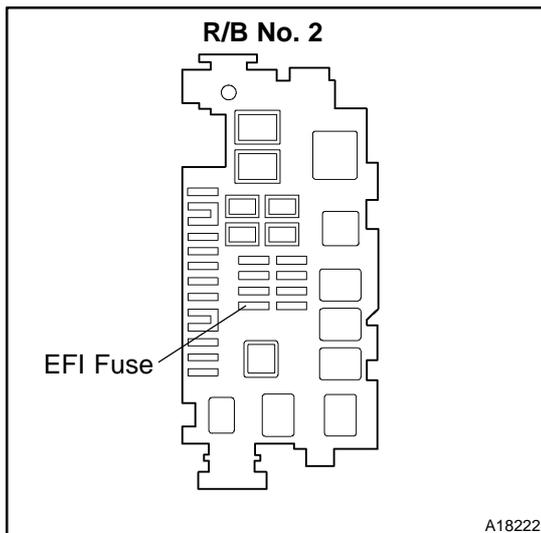**PREPARATION:**

Remove the EFI fuse from the R/B No. 2.

CHECK:

Check the continuity of the EFI fuse.

OK:

Continuity

NG

Check for short in all harness and components connected to EFI fuse.

OK

Check and repair harness or connector between battery and EFI fuse, and EFI fuse and ECM.