

DTC	P0604	Internal Control Module Random Access Memory (RAM) Error
------------	--------------	---

DTC	P0606	ECM/PCM Processor
------------	--------------	--------------------------

DTC	P0607	Control Module Performance
------------	--------------	-----------------------------------

DTC	P0657	Actuator Supply Voltage Circuit / Open
------------	--------------	---

CIRCUIT DESCRIPTION

DTC No.	DTC Detecting Condition	Trouble Area
P0604 P0606 P0607 P0657	ECM malfunction	• ECM

INSPECTION PROCEDURE

HINT:

Read freeze frame data using the hand-held tester or the OBD II scan tool, as freeze frame data records the engine conditions when a malfunction is detected. When troubleshooting, it is useful for determining whether the vehicle was running or stopped, the engine was warmed up or not, the air-fuel ratio was lean or rich, etc. at the time of the malfunction.

Replace ECM.