

**PROBLEM SYMPTOMS TABLE**

Symptom	Suspect Area	See page
Engine does not crank (Does not start)	1. Starter 2. Starter relay	ST-16 ST-18
No initial combustion (Does not start)	1. ECM power source circuit 2. Fuel pump control circuit 3. ECM	DI-443 DI-448 IN-28
No complete combustion (Does not start)	1. Fuel pump control circuit	DI-448
Engine cranks normally (Difficult to start)	1. Starter signal circuit 2. Fuel pump control circuit 3. Compression	DI-390 DI-448 EM-3
Cold engine (Difficult to start)	1. Starter signal circuit 2. Fuel pump control circuit	DI-390 DI-448
Hot engine (Difficult to start)	1. Starter signal circuit 2. Fuel pump control circuit	DI-390 DI-448
High engine idle speed (Poor idling)	1. ECM power source circuit	DI-443
Low engine idle speed (Poor idling)	1. Fuel pump control circuit	DI-448
Rough idling (Poor idling)	1. Compression 2. Fuel pump control circuit	EM-3 DI-448
Hunting (Poor idling)	1. ECM power source circuit 2. Fuel pump control circuit	DI-443 DI-448
Hesitation/Poor acceleration (Poor driveability)	1. Fuel pump control circuit 2. A/T faulty	DI-448 DI-476
Surging (Poor driveability)	1. Fuel pump control circuit	DI-448
Soon after starting (Engine stall)	1. Fuel pump control circuit	DI-448
During A/C operation (Engine stall)	1. ECM	IN-28