

POSITIVE CRANKCASE VENTILATION (PCV) SYSTEM INSPECTION



EC010-05

1. INSPECT PCV VALVE

- (a) Remove the PCV valve.
 - (1) Disconnect the PCV hose from the PCV valve.
 - (2) Remove the PCV valve.
- (b) Install a clean hose to the PCV valve.
- (c) Inspect the PCV valve operation.
 - (1) Blow air into the cylinder head cover side, and check that air passes through easily.

CAUTION:


Do not suck air through the valve. Petroleum substances inside the valve are harmful.

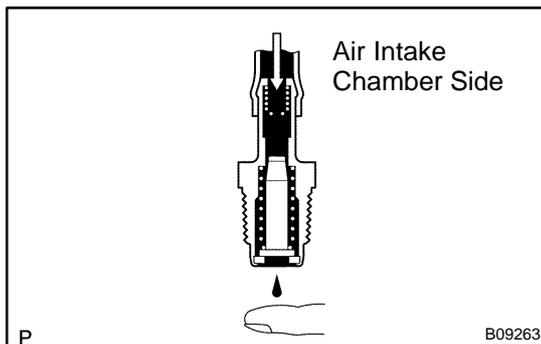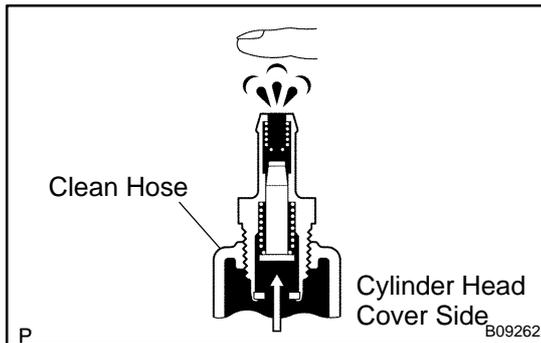

- (2) Blow air into the air intake chamber side, and check that air passes through with difficulty.

If operation is not as specified, replace the PCV valve.

- (d) Remove the clean hose from the PCV valve.
- (e) Reinstall the PCV valve.
- (f) Blow air intake chamber side when lift up the is side valve, and check that the is strongresistance to air flow.

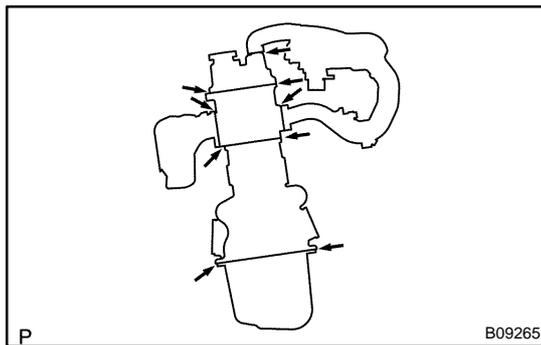

2. INSPECT HOSES, CONNECTIONS AND GASKETS

Visually check for cracks, leaks or damage.