

THREE-WAY CATALYTIC CONVERTER (TWC) SYSTEM

ON-VEHICLE INSPECTION

EC0BN-01

1. INSPECT EXHAUST PIPE ASSEMBLY

- (a) Check the connections for looseness or damage.
- (b) Check the clamps for weakness, cracks or damage.

2. INSPECT TWC

Check for dents or damage.

If any part of the protector is damaged or dented to the extent that it contacts the TWC, repair or replace it.

3. INSPECT TWC HEAT INSULATOR

- (a) Check the heat insulator for damage.
- (b) Check for adequate clearance between the TWC and heat insulator.