

A07474

DISASSEMBLY

1. REMOVE CAMSHAFT HOUSING PLUGS


- (a) Remove the bolt, nut and cylinder head rear plate.
- (b) Remove the 2 bolts and camshaft bearing cap and housing plug.

2. REMOVE VALVE LIFTERS AND SHIMS

Pull out the valve lifter and shim by hand.

HINT:

Arrange the valve lifters and shims in correct order.

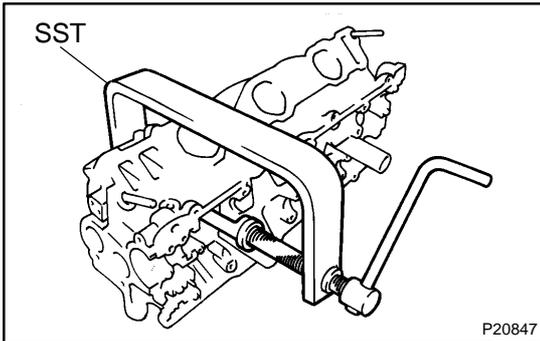


P20847

3. REMOVE VALVES

- (a) Using SST, compress the valve spring and remove the 2 keepers.


SST 09202-70020

- (b) Remove the spring retainer, valve spring and valve.

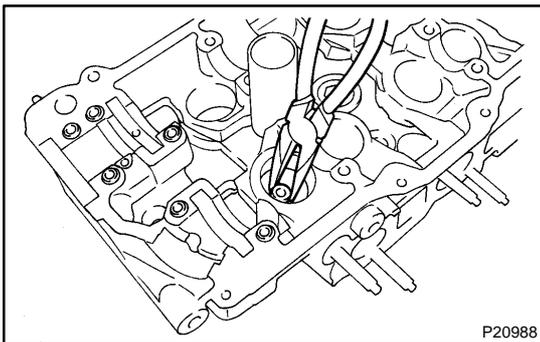

P20988

- (c) Using needle-nose pliers, remove the oil seal.

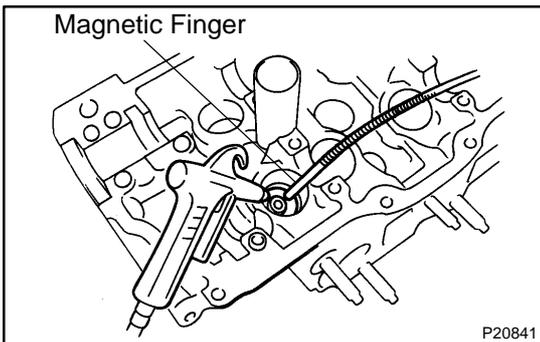

P20841

- (d) Using compressed air and a magnetic finger, remove the spring seat by blowing air.

HINT:

Arrange the valves, valve springs, spring seats and spring retainers in the correct order.